

CURRENT REVISION LIST

May 2009

Product	Description	Manual	Firmware	Setup Program	Updated
139	Instruction Manual	1601-0004-A2	*		1-Nov-1988
139	Instruction Manual, Mod #35 (Ont. Hydro)		*		1-Sep-1987
169	Basic Instruction Manual (Obsolete)	E5			22-Jan-1989
169	Instruction Manual	1601-0003-A3	169.E7.3		23-Jan-1995
169	Motorcomm Instruction Manual (Obsolete)		OBS		1-Jul-1990
169	Protocol Manual	E6	E7.2		28-Sep-1993
169	Spanish Instruction Manual		*		14-Oct-1986
239	Instruction Manual	1601-0067-DC	2.71	3.10	17-Dec-2007
269	Instruction Manual	1601-0025-E2	269.D6.0.4	6.07	12-Aug-2002
269 Plus	Basic Protocol Manual	B2			28-Sep-1993
269 Plus	Instruction Manual	1601-0013-E3	269P.D6.0.4	6.07	19-Jul-2006
269 Plus	Modbus Protocol Manual	1601-0051-BC	269P.B5.2.0		23-Jan-1995
269 Plus	Square D Protocol Manual (Mod 266)	1601-0052-BA	269.B5.2.0.266		23-Jan-1995
301	Instruction Manual	1601-0014-D4	301.D1.20		28-Sep-1993
350	Instruction Manual	1601-9091-A2			15-May-2009
369	Instruction Manual	1601-0077-BS	3.30	3.90	17-Mar-2009
445	Instruction Manual	B2			28-Sep-1993
465	Instruction Manual	A2			28-Sep-1993
469	Instruction Manual (Enhanced Option)	1601-0122-A6	5.01	5.02	2-Jun-2008
469	Instruction Manual (Standard Faceplate)	1601-0057-DH	2.90	"	7-Nov-2008
489	Instruction Manual (Enhanced Faceplate)	1601-0150-AC	4.02	4.01	6-May-2009
489	Instruction Manual (Standard Faceplate)	1601-0071-EB	1.53	4.00	10-Jul-2008
515	Instruction Sheet	1601-0024-A4			13-Sep-1996
565	Instruction Manual (with AEG Modbus protocol)	1601-0017-E5	18E280B.000		13-Sep-1997
575	Instruction Manual (with AEG Modbus protocol)	1601-0019-E7	582E80B.000		13-Sep-1997
735/737	Instruction Manual	1601-0048-DJ	1.56	2.00	7-Nov-2008
735/737	Type Testing Report	1601-0053-A3			
745	Instruction Manual	1601-0161-A6	5.11	5.12	3-Oct-2008
750/760	Instruction Manual	1601-0120-AA	7.20	7.21	10-Jul-2008
ALPS	Instruction Manual	GEK105555-H	V0004.04AA33	6.00	9-Mar-2004
AV3	Instruction Manual	1601-0020-A2			1-Mar-1986
AV3 Pyrotenax	Instruction Manual	1601-0009			
B30	Instruction Manual	GEK113476-T1	5.60	5.60	8-Jul-2008
B30	Instruction Manual (French)	GEK113424-S1	5.51		15-Jan-2009
B90	Instruction Manual	GEK113477-T1	5.60	5.60	8-Jul-2008
B90	Instruction Manual (French)	GEK113425-S1	5.51		15-Jan-2009
BUS1000	Instruction Booklet	GEK98514-B			1-Aug-2000
C30	Instruction Manual	GEK113478-T1	5.60	5.60	8-Jul-2008
C30	Instruction Manual (French)	GEK113426-S1	5.51		15-Jan-2009
C60	Instruction Manual	GEK113479-T1	5.60	5.60	8-Jul-2008
C60	Instruction Manual (French)	GEK113427-S1	5.51		15-Jan-2009
C70	Instruction Manual	GEK113480-T1	5.60	5.60	8-Jul-2008
C70	Instruction Manual (French)	GEK113428-S1	5.51		15-Jan-2009
C90Plus	Instruction Manual	GEK113255	1.60	1.60	16-Dec-2008
CIO	Instruction Manual	GEK106465-A			20-Apr-2006
CIO	Instruction Manual (French)	GEK113021-A			13-Nov-2006
D30	Instruction Manual	GEK113481-T1	5.60	5.60	8-Jul-2008
D30	Instruction Manual (French)	GEK113429-S1	5.51		15-Jan-2009
D485	Instruction Manual	1601-0235-A2		1.00	15-Dec-2005
D60	Instruction Manual	GEK113482-T1	5.60	5.60	8-Jul-2008
D60	Instruction Manual (French)	GEK113430-S1	5.51		15-Jan-2009
D90Plus	Instruction Manual	GEK113258	1.60	1.60	16-Dec-2008
DBF	Instruction Manual	GEK106168-F			20-Sep-2006
DBF	Instruction Manual (French)	GEK106462-F			20-Sep-2006

CURRENT REVISION LIST

May 2009

Product	Description	Manual	Firmware	Setup Program	Updated
DBT	Instruction Booklet	GEK105597-C			4-Jan-2005
DBT	Instruction Booklet (French)	GEK106497-B			8-Jun-2004
DCS4	Instruction Manual				
DDFR	instruction Manual	1601-9024-A2		2.00	27-Aug-2007
DDS	Instruction Manual	GEK106164-D			9-Feb-2005
DDS	Instruction Manual (French)	GEK106275-D			9-Feb-2005
DFF	Instruction Manual	GEK106166-F		1.00	15-Dec-2008
DFF	Instruction Manual (French)	GEK106476-E			30-Mar-2006
DFP100	instruction Booklet	GEK105545 -C	4.66	1.2	29-Oct-1999
DFP200	Instruction Booklet	GEK105559-B	2.90	3.10	28-Feb-2002
DGP	Instruction Manual	GEK100666-F	2.10	2.0	27-Aug-2004
DGT	Instruction Manual	GEK113441-A2	3.1.1	3.10	17-Mar-2009
DIAC	Instruction Booklet	GEK105570-C			19-Nov-2001
DIAC	Type 66K Instruction Manual	GEK106261-C			20-Nov-2000
DRS	Instruction Booklet	GEK106246-A			15-Jan-2001
DRS	Instruction Booklet (French)	GEK106461-A			4-May-2006
DTP-B	Instruction Manual	GEK106243-E			9-Aug-2005
DTP-B	Instruction Manual (French)	GEK106467-E			9-Aug-2005
DTR	Instruction Manual	GEK106305-A			21-Feb-2005
DTR	Instruction Manual (French)	GEK106316-A			21-Feb-2005
EPM1000	Instruction Manual (Rev. A7)	GEK106554-F			10-Dec-2007
EPM2000	Instruction Manual (Rev. A2)	GEK106556-A			7-Jul-2005
EPM4000	Instruction Manual (Rev. A9)	GEK106555-H			10-Dec-2007
EPM5000	Series (5200/5300/5350) Instruction Manual	GEK106557-B			1-Nov-2007
EPM5100	User Guide	GEK113391-A			13-Feb-2008
EPM6000	Instruction Manual (Rev. A4)	GEK106558-C			26-Sep-2007
EPM9000	Series Instruction Manual (Rev. A4)	GEK113281-C		3.08	29-Aug-2008
EPM9800	Instruction Manual (Rev. A3)	GEK113198-B		"	29-Aug-2008
F35	Instruction Manual	GEK113483-T1	5.60	5.60	8-Jul-2008
F35	Instruction Manual (French)	GEK113431-S1	5.51	"	15-Jan-2009
F485	Instruction Manual	1601-0073-A3			17-Apr-2003
F60	Instruction Manual	GEK113484-T1	5.60	5.60	8-Jul-2008
F60	Instruction Manual (French)	GEK113432-S1	5.51		15-Jan-2009
F650	Instruction Manual for enhanced model	GEK106310-T	3.71	3.76	30-Jan-2008
F650	Instruction Manual for enhanced model (French)	GEK106229-S			18-Apr-2007
F650	Instruction Manual for standard model	GEK106310-N	2.20	3.76	30-Jan-2008
F650	Instruction Manual for standard model (French)	GEK106229-N			1-Dec-2005
F650	User Manual	GEK113000-S	"	"	18-Apr-2007
FAC	Instruction Booklet	GEK106297-A			4-Oct-2000
FM2	Instruction Manual	1601-0154-A2	1.10	1.10	9-Aug-2005
G30	Instruction Manual	GEK113485-T1	5.60	5.60	8-Jul-2008
G30	Instruction Manual (French)	GEK113433-S1	5.51		15-Jan-2009
G60	Instruction Manual	GEK113486-T1	5.60	5.60	8-Jul-2008
G60	Instruction Manual (French)	GEK113434-S1	5.51		15-Jan-2009
G650	Instruction Manual	GEK113285-A	3.74	3.76	30-Jan-2008
G650	User Manual	GEK113328	"	"	30-Aug-2006
HardFiber	Reference Manual	GEK113500-A			3-Oct-2008
HT3/HA10	Instruction Manual	1601-0005-A2	E2		1-Jun-1985
L30	Instruction Manual	GEK113496-T1	5.60	5.60	8-Jul-2008
L60	Instruction Manual	GEK113487-T1	5.60	5.60	8-Jul-2008
L60	Instruction Manual	GEK113435-S1	5.51		15-Jan-2009
L90	Instruction Manual	GEK113488-T1	5.60	5.60	8-Jul-2008
L90	Instruction Manual (French)	GEK113436-S1	5.51		15-Jan-2009
LM10	Instruction Manual	1601-0165-A7	1.80	2.60	29-Aug-2008

CURRENT REVISION LIST

May 2009

Product	Description	Manual	Firmware	Setup Program	Updated
LPS	Instruction Manual	GEK106159-B	V0004.04AA33	6.00	25-Mar-2003
LPS-O	Instruction Manual	GEK106266-A	V0001.03AA20	6.00	25-Mar-2003
M60	Instruction Manual	GEK113489-T1	5.60	5.60	8-Jul-2008
M60	Instruction Manual (French)	GEK113437-S1	5.51		15-Jan-2009
MDP	Instruction Booklet	GEK100682-D		2.0	14-Sep-2000
MFF	Instruction Manual	GEK105211-B			29-Oct-1999
MIB	Instruction Manual	GEK106426-D		2.41	27-Nov-2008
MIF	Instruction Manual (French)	GEK106312-L		"	17-Jan-2007
MIF-N	Instruction Manual	GEK106298-D	1.01/2.08	"	17-Jan-2007
MIF-P	Instruction Manual	GEK106273-L	1.01/2.08	"	21-Nov-2005
MIFII	Instruction Manual	GEK106237-N	4.01	"	31-Aug-2007
MIFII	Instruction Manual (French)	GEK106643-K	4.01	"	6-Dec-2005
MIFII	Instruction Manual (Spanish)	GEK106238-K	4.01	"	6-Dec-2005
MIFII-N	Instruction Manual	GEK106618-D	4.01	"	28-Apr-2006
MIFII-N	Instruction Manual (Spanish)	GEK106619-D	4.01	"	28-Apr-2006
MIG	Instruction Manual	GEK106304-G	1.08	"	13-Oct-2005
MIG	Instruction Manual (French)	GEK106337-G		"	13-Oct-2005
MIGII	Instruction Manual	GEK113188-A	4.01/4.02	"	1-Nov-2007
MIN	Instruction Manual	GEK106306-F		"	20-Jan-2006
MIN	Instruction Manual (Spanish)	GEK106307-F		"	20-Jan-2006
MINII	Instruction Manual	GEK113023-A		"	20-Nov-2007
MIV	Instructions	GEK106247-J	1.01/2.08	"	21-Nov-2005
MIV	Instructions (French)	GEK106323-J		"	21-Nov-2005
MIVII	Instruction Manual	GEK106616-E	4.05	"	16-Mar-2009
MIVII	Instruction Manual (Spanish)	GEK106617-D	"	"	1-May-2006
MIW	Instruction Manual	GEK106308-C	1.04	"	21-Jul-2005
MIW	Instruction Manual (Spanish)	GEK106309-C	1.04	"	21-Jul-2005
MIWII	Instruction Manual	GEK-113308		"	3-Nov-2006
ML1600	Instruction Manual	1601-0221-AA	3.2.0		4-Mar-2009
ML2400	Instruction Manual	1601-0220-AB	"		25-Jul-2008
ML600	Instruction Manual	1601-0222-A2			23-Jan-2007
MLJ	Instructions	GEK106213-B			8-Feb-2000
MLJ	Instructions (French)	GEK106280			8-Jun-2004
MM2	Instruction Manual	1601-0056-DU	5.22	5.21	1-Apr-2009
MM200	Instruction Manual	GEK113400-A4	1.10	1.30	4-Mar-2009
MM200	Quickstart Guide	GEK113401-C			4-Mar-2009
MM3	Instruction Manual	1601-0107-A7	1.24	1.21	12-Oct-2007
MM300	Instruction Manual	GEK113022-A6	1.31	1.30	7-Nov-2008
MM300	Quickstart Guide	GEK113336-E			7-Nov-2008
MOV	Instruction Booklet	GEK106271-A			4-Oct-2000
MPM	Instruction Sheet	1601-0075-C1	1.32		29-Mar-2005
MTM+	Instruction Manual	1601-0022-ED	E1.88		7-Mar-1996
MTM	Instruction Sheet	1601-0021-E4	E1.88		27-Mar-1995
Multinet	Instruction Manual	1601-0117-A2		2.02	21-May-2009
MultiNet4	Instruction Manual	GEK113502-A1		1.00	11-Dec-2008
N60	Instruction Manual	GEK113490-T1	5.60	5.60	8-Jul-2008
N60	Instruction Manual (French)	GEK113438-S1	5.51		15-Jan-2009
P485	Instruction Manual	1601-0237-A2		1.00	15-Dec-2005
P4A	Instruction Manual	1601-0001-A4	G2		1-Dec-1988
PHT3 Pyrotenax	Instruction Manual	1601-0018-E2			
PMCS	Software	DEU-021 0398			
PQM	Instruction Manual	1665-0003-CJ	3.66	3.61	24-Oct-2006
PQMII	Instruction Manual	1601-0118-AB	2.24	2.33	15-Dec-2008
Quality Assurance	Manual ISO9002 & z299.3	1601-0046-B4			30-Apr-1996

CURRENT REVISION LIST

May 2009

Product	Description	Manual	Firmware	Setup Program	Updated
RDB86	Instruction Manual	GEK106245-B			10-Jan-2006
Relaycom	Instruction Manual	1601-0042-BA	4.1	4.01	10-Jan-1997
Relaycom	Instruction Manual for SR750/760	1601-0069-A1	3.11		15-Feb-1996
RRTD	Instruction Manual	1601-0104-B7	1.52	1.51	4-Mar-2009
RS485 Card	Instruction Sheet	1601-0066-A1			
SBM	Instruction Manual	GEH-2038-E			2-Mar-2001
SCI Module	Instruction Sheet	1601-0063-A2			
SFF	201/202/204 Instruction Manual	GEK106636-D			3-May-2007
SGC	Instruction Manual	GEK86069-J			20-Mar-2002
SGR	Instruction Manual	1601-0043-A4			20-Jun-1995
SM10	Instruction Manual	1601-0010-A4			28-Sep-1993
SMOR-B	Instruction Booklet	GEK105593-G			23-Sep-2005
SMOR-B	Instruction Booklet (French)	GEK106463-G			23-Sep-2005
SPM	Instruction Manual	1601-0072-A9	202-000	2.10	7-Nov-2008
T35	Instruction Manual	GEK113491-T1	5.60	5.60	8-Jul-2008
T35	Instruction Manual (French)	GEK113439-S1	5.51		15-Jan-2009
T60	Instruction Manual	GEK113492-T1	5.60	5.60	8-Jul-2008
T60	Instruction Manual (French)	GEK113440-S1	5.51		15-Jan-2009
TB3	Instruction Manual	1601-0006-E2	E2		
TOV	Instruction Manual	GEK98834-C			7-Jun-2005
TOV	Instruction Manual (French)	GEK98825			8-Jun-2004
TS3	Instruction Manual	1601-0002	E2		
W650	Instruction Manual	GEK113032-A	3.02	3.76	30-Jan-2008

* No rev specified in manual

✕ Indicates change this month

** Typeset master not available.