



Life Cycle Cost Analysis



Contents

Overview	1
Overview of the Life Cycle Cost Analysis (LCC) Module	1
Access the LCC Overview Page	1
LCC Workflow	2
Workflow	3
Life Cycle Cost Analysis Workflow	3
Define Analysis/Develop Model	3
Assemble Team	3
Add Reference Documents	3
View Existing Analysis	4
Develop a Scenario	4
Develop Operating Profile	4
Create Elements/Assign Assets	4
Acquire Data	4
Allocate Resources	4
Review Scenario Data	4
Copy/Modify/Update Scenarios	5
Review Analysis Results	5
Complete Analysis	5
LCC Analyses	6
About LCC Analyses	6
About Fleet Management	6
Access an LCC Analysis	6
Create an LCC Analysis	15
Modify an LCC Analysis	16
Delete an LCC Analysis	17
Access Reference Documents in LCC	17
Access the LCC Team Members Section	18
Access Recommendations in LCC	18
Resource Management	19
About Resource Management	19
Create a Resource	19

Delete a Resource	20
Scenarios	21
About Scenarios	21
About Operating Profiles	21
About LCC Elements	21
About Asset Groups in LCC	22
Access a Scenario	22
Create a Scenario for an LCC Analysis	23
Create a Scenario for a Fleet Analysis	25
Create a Profile	28
Create a Secondary Element	28
Delete a Secondary Element	30
Import Scenario Elements Into an Analysis	31
Copy a Scenario Within an Analysis	32
Delete a Profile	32
Delete a Scenario	32
Cost Data	33
About Cost Data	33
About Operating Costs	33
About Import Cost Data	34
About Calculated Values	35
Access a Cost Data Grid	35
Create a Resource	36
Add an Existing Resource	37
Create a Secondary Element in the Cost Data Grid	38
Copy a Secondary Element	39
Create Operating Costs Manually	40
Import Cost Data	42
Access Calculated Values	56
Add Capital Costs to the Cost Data Grid	56
Delete Cost Data	57
Deployment	59
Deploy LCC for the First Time	59
Upgrade or Update LCC to V4.5.0.0.0	59
LCC Security Groups	60

Reference	62
General Reference	62
Family Field Descriptions	65
Catalog Items	72
Rates and Calculations	74

Copyright GE Digital

© 2020 General Electric Company.

GE, the GE Monogram, and Predix are either registered trademarks or trademarks of All other trademarks are the property of their respective owners.

This document may contain Confidential/Proprietary information of and/or its suppliers or vendors. Distribution or reproduction is prohibited without permission.

THIS DOCUMENT AND ITS CONTENTS ARE PROVIDED "AS IS," WITH NO REPRESENTATION OR WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF DESIGN, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE. ALL OTHER LIABILITY ARISING FROM RELIANCE UPON ANY INFORMATION CONTAINED HEREIN IS EXPRESSLY DISCLAIMED.

Access to and use of the software described in this document is conditioned on acceptance of the End User License Agreement and compliance with its terms.

Overview

Overview of the Life Cycle Cost Analysis (LCC) Module

The Life Cycle Cost Analysis (LCC) module provides the ability to balance costs, plan budgets, collect performance data and build contingency plans for your organization.

 
By using LCC, your organization can:

- Develop Process Models
- Acquire Data
- Run Models
- Perform Analyses
- Report Results
- Track Costs

Access the LCC Overview Page

Procedure


In the module navigation menu, select **Strategy > Life Cycle Cost Analysis**. The **LCC Overview** page appears.

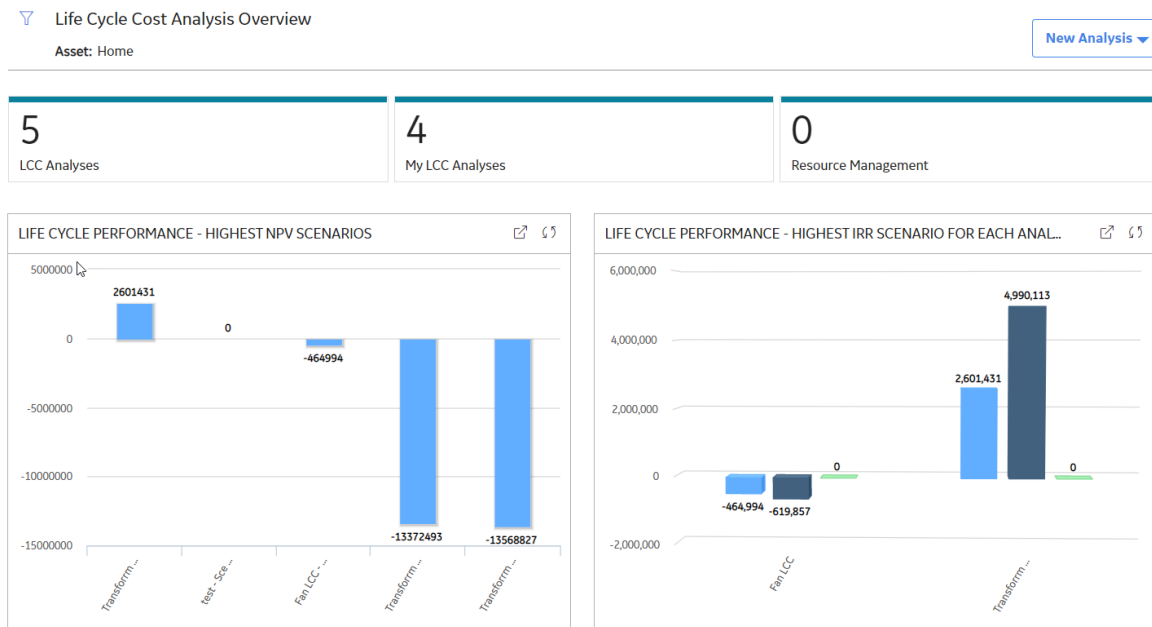

The **LCC Overview** page displays the following sections with information related to Life Cycle Cost Analysis:

- **LCC Analyses** : Contains a list of Life Cycle Analyses associated with assets at or below the selected Asset Hierarchy level.
- **My LCC Analyses** : Contains a list of the LCC Analyses to which you are assigned as a team member.
- **Resource Management** : Contains a list of Resources available to be applied to Life Cycle costs available in the database.

- **Life Cycle Performance - Highest IRR Scenario For Each Analysis** : Displays a summary of Life Cycle Performance of the greatest [Internal Rate of Return \(IRR\)](#) of all the scenarios per analysis.
Note: LCC assumes that all LCC Analyses being compared share the same currency.
- **Life Cycle Performance - Top NPV Scenarios** : Displays a summary of Life Cycle Performance of the greatest [Net Present Value \(NPV\)](#) scenarios.
Note: LCC assumes that all LCC Analyses being compared share the same currency.

By default, the hierarchy level is set to Home, displaying all of the analyses with and without assets. You can filter the hierarchy level by selecting  on the upper-left corner of the page. When setting the filter to an asset or functional location in the hierarchy, only those analyses linked to the selected functional location and its children or to the selected asset will appear.

LCC Workflow

This workflow provides the basic, high-level steps for using this module. The steps and links in this workflow do not necessarily reference every possible procedure.

 
1. [Define an Analysis](#) to create a Life Cycle Cost Analysis.
2. [Create Scenarios](#) to reflect the best forecast of life cycle costs for the defined period, using cost data to populate the Operating and Capital costs. Within the scenario, you will also develop and define an Operating Profile, Primary Element and Secondary Elements. Primary and Secondary elements can be defined and associated with asset hierarchy elements.
3. [Define cost elements](#).
4. [Import Cost Data](#) or [Manually Add Cost Data](#) to associated scenario elements. After the costs are entered, they will be saved in the Cost Data grid where you can review them.
5. [Create resources applicable to your analysis](#), such as people, replacement parts, consumable parts, oils and lubricants, maintenance equipment, and tools.
6. Analyze results of your Analysis.

Workflow

Life Cycle Cost Analysis Workflow

This workflow describes the process for developing a Life Cycle Cost Analysis to compare costs through various scenarios.

In the following workflow diagram, the blue text in a shape indicates that a corresponding description has been provided in the sections that follow the diagram. For more information, refer to the topic Interpreting the Workflow Diagrams.

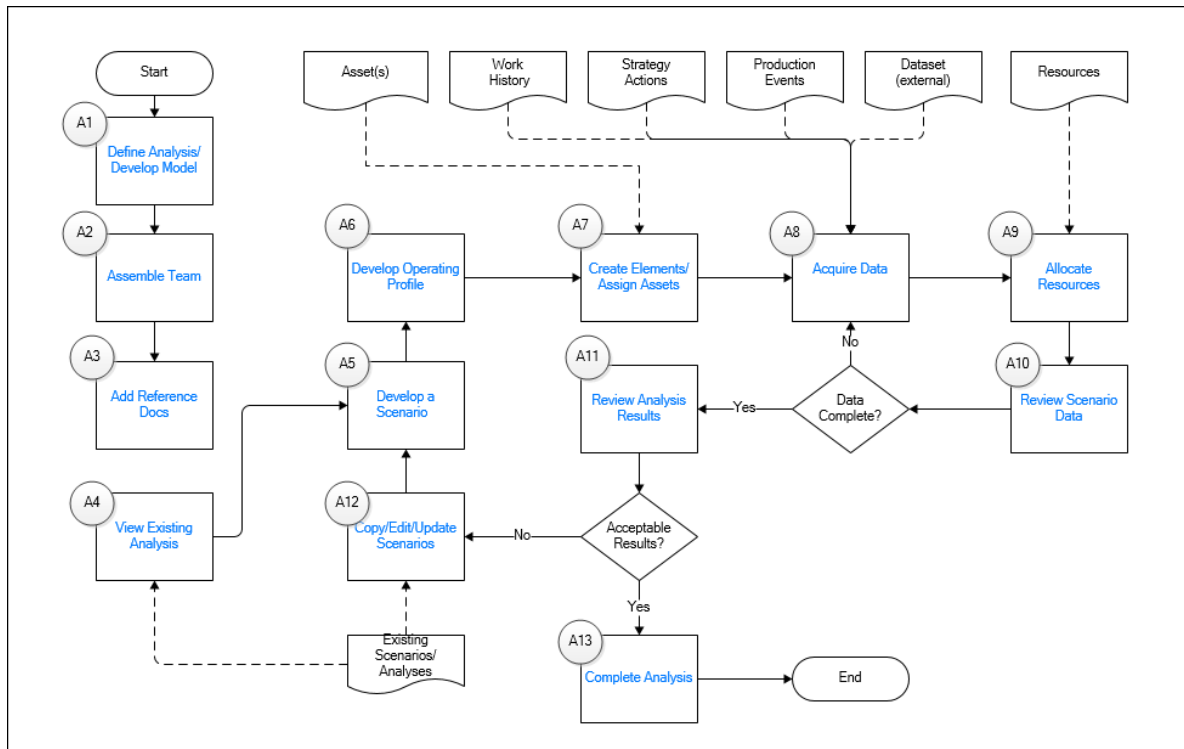

Define Analysis/Develop Model

Persona: Analyst

Define the LCC Analysis, duration, and financial model to be applied to the analysis.

Assemble Team

Persona: Analyst

Assemble team members to perform an LCC.

Add Reference Documents

Persona: Analyst

Create reference documents to associate files or websites with a record in the GE Digital APM database.

View Existing Analysis

Persona: Analyst

Find, select, and open a previously created analysis via the **LCC Module Overview** page. For a baseline test, this will be the analysis created in step A1.

Develop a Scenario

Persona: Analyst

Develop a new scenario for the first scenario. A new scenario will form the best current projection of future asset usage over the defined period of the analysis.

Develop Operating Profile

Persona: Analyst

Develop the operating profile for the analysis by defining operating usage through each defined period.

Create Elements/Assign Assets

Persona: Analyst

Create Primary and Secondary Elements for the Scenario. Elements can be linked to assets or locations taken from the hierarchy, but this is not mandatory as required elements may not always exist in the hierarchy. Secondary Elements may also be added from previously created Asset Groups.

Acquire Data

Persona: Analyst

Categorize each element of cost data within the scenario. Basic categories are provided by default, but others may need to be added. Operating Costs may then be added manually or imported for each element.

Allocate Resources

Persona: Analyst

Allocated resources used in operating and maintaining an asset in the scenario. This may include humans, tools, facilities, insurance, etc.

Review Scenario Data

Persona: Analyst

Review all added or imported data in the scenario for accuracy and completeness. Amend and update the data as needed.

Copy/Modify/Update Scenarios

Persona: Analyst

Alternative scenarios will usually be variations of a previously created scenario. Time can be saved by copying a scenario, and then modifying the copied scenario needed.

Review Analysis Results

Persona: Analyst

Using the various charts provided, analyze the results of the analysis. Compare costs for each scenario according to the displayed categories. Create additional scenarios as needed until an optimum scenario for minimizing life cycle costs for the analysis has been determined.

Complete Analysis

Persona: Analyst

Change the state of the LCC to Completed, making the analysis read-only.

LCC Analyses

About LCC Analyses

LCC Analyses are economic analyses used to evaluate the total cost of ownership of an asset, including cost of installation, operation, maintenance, conversion, and decommission, through applying different operating scenarios to a model.

Managers are able to use analyses to understand the cost of ownership of Assets or fleets of Assets over defined accounting periods or planned asset life. By comparing scenarios, LCC Analyses provide information to inform choices to optimize costs over the period defined in the Analysis. Cost information is presented in a range of categories to help managers determine which assets to buy, what maintenance strategies are most cost effective, and when replacement is necessary. Informed decisions can be based on a range of financial criteria for all scenarios in the analysis, presented in a chart format. Examples include Capital Costs, Operating Costs and Cashflow.

For Example, as a transportation manager, I would like to evaluate the costs of owning a fleet of trucks. Using an LCC Analysis, the company will keep a log of the use and maintenance of each truck in the fleet in order to determine the exact cost of each truck in the fleet and to know when replacement or decommission should occur.

About Fleet Management

Using LCC Analyses, you can now manage a fleet of vehicles in one central location. Analyses are used to collect performance data, balance costs of ownership, and plan action items over the lifespan of each vehicle, and the fleet.

Access an LCC Analysis

Before You Begin

- [Create an Analysis](#)

Procedure

1. [Access the LCC Overview](#) page.
2. Select the **LCC Analyses** tab.

The **LCC Analyses** section appears, displaying a list of available LCC Analyses.

Life Cycle Cost Analysis Overview

Asset: Home New Analysis ▾

2

LCC Analyses

1

My LCC Analyses

0

Resource Management

ANALYSIS NAME	ANALYSIS TYPE	ANALYSIS STATE	START DATE	END DATE	DESCRIPTION
Fan LCC	LCC Analysis	In Progress	1/1/2012	12/31/2021	
Transformer LCC	LCC Analysis	In Progress	1/1/2016	12/31/2050	The Life Cycle Costing for a group of transformers

Rows per page: 50 200 500 1 - 2 of 2 Results ← 1 →

3. In the list, in the **Analysis Name** column, select an analysis.


In a new page, the **Analysis Summary** workspace for the selected analysis appears, displaying the **Summary** section. The following charts related to LCC Analyses can be accessed from the drop-down list box:

- **Capital Cost:** Displays a summary trend for each scenario, which is based on the sum of all capital costs per period for each scenario.
- **Operating Cost:** Displays a summary trend for each scenario, which is based on the sum of all operating costs per period for each scenario.
- **Cash Flow Trend:** Displays a summary trend for each scenario, which is based on the cash flow per period for each scenario.
- **Capital Cost Break Down:** Displays stacked bars for each scenario, which breaks down the capital costs for the capital cost type.
- **Operating Cost Break Down:** Displays stacked bars for each scenario, which breakdown the operating costs by elements.
- **Depreciated Values:** Displays a summary trend of depreciated values per period for each scenario.
- **Present Values:** Displays a summary trend of present values per period for each scenario.
- **Total Cost:** Displays a cumulative summary trend of the associated capital costs and operating costs for each scenario.

About Analysis Charts and Graphs


Capital Cost Chart

The Capital Cost Summary Chart displays the trend for each scenario, as well as the sum of all capital costs per period for each scenario.

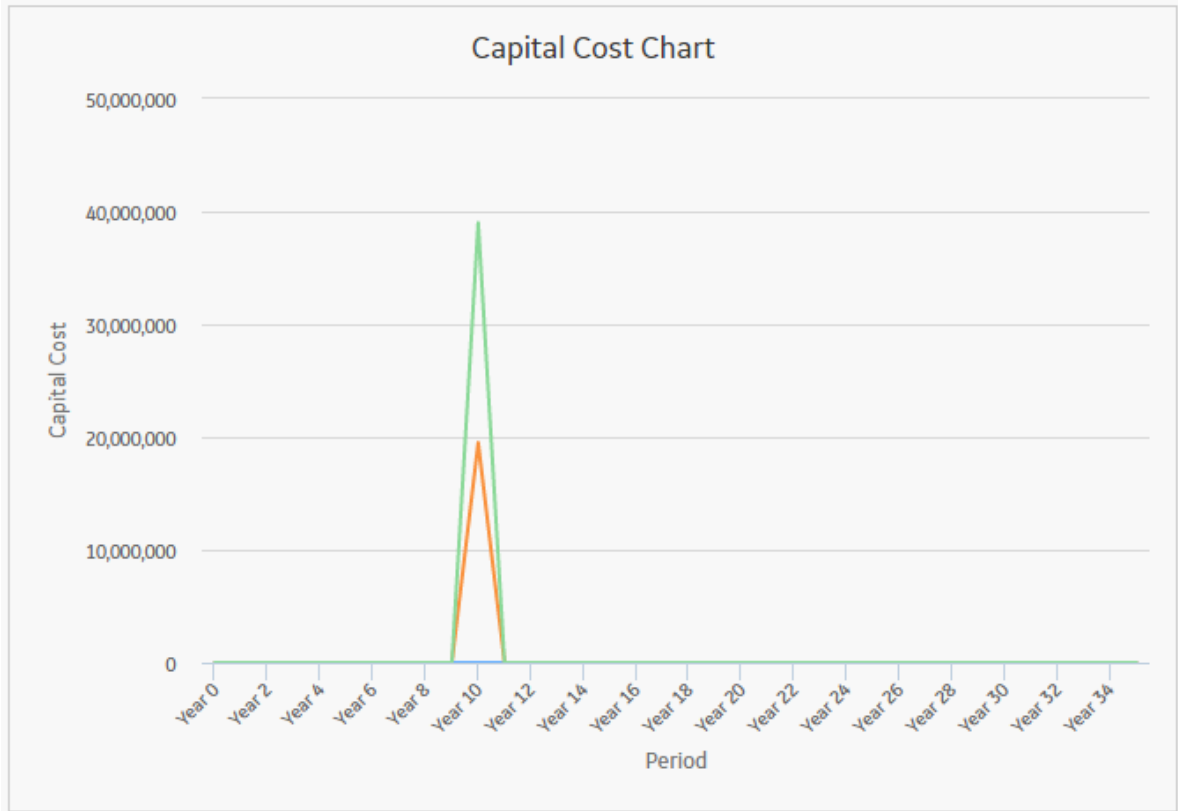 


Capital Cost Break Down Chart

The Capital Cost Break Down Chart displays all the values that comprise the capital cost totals for each scenario in the analysis. Within the chart, you will see a complete breakdown of the costs contained in a scenario. If you hover over the individual capital costs, the title and details of the costs appear.

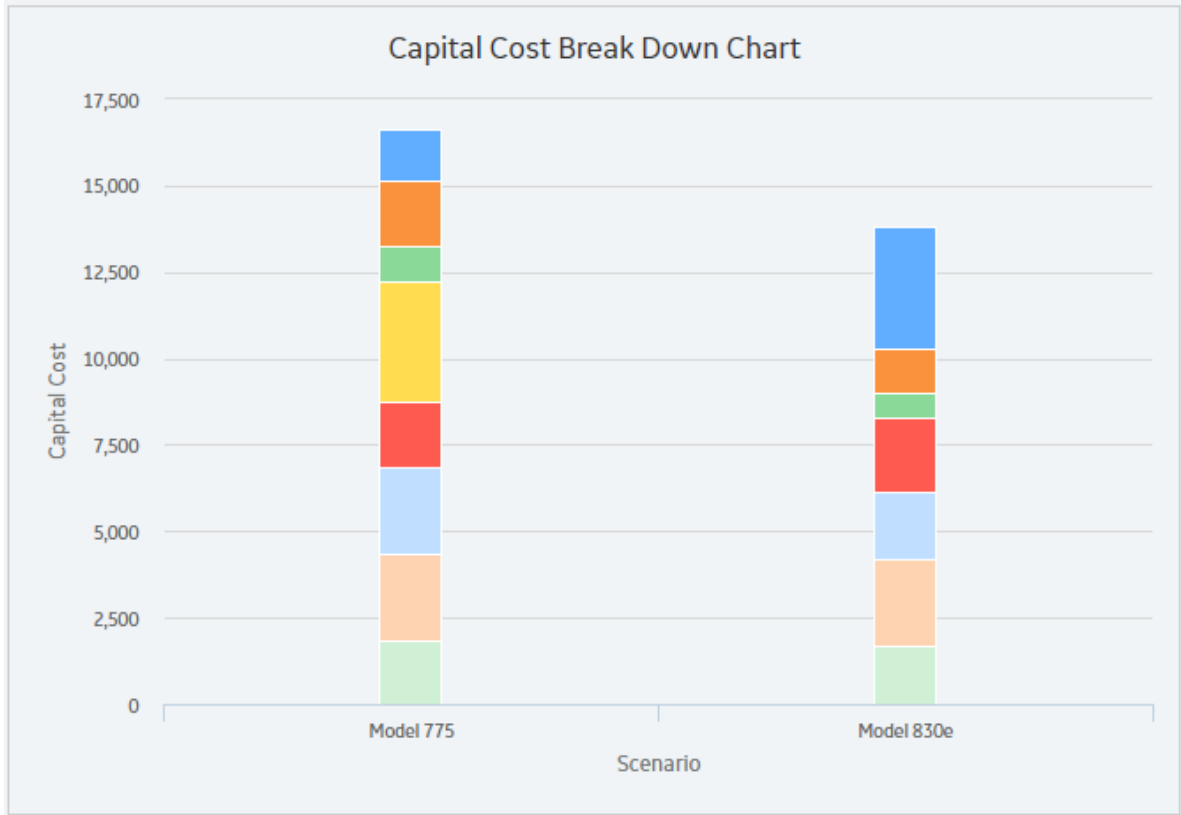 


Cash Flow Chart

The Cash Flow Chart displays Cash Flow per period. All of the values from the Cost Data grid are factored into the output shown in the chart, making it easier for you to monitor the movement of money throughout the span of the Analysis and easily view and determine which scenario has the optimal cash flow as compared with other scenarios.

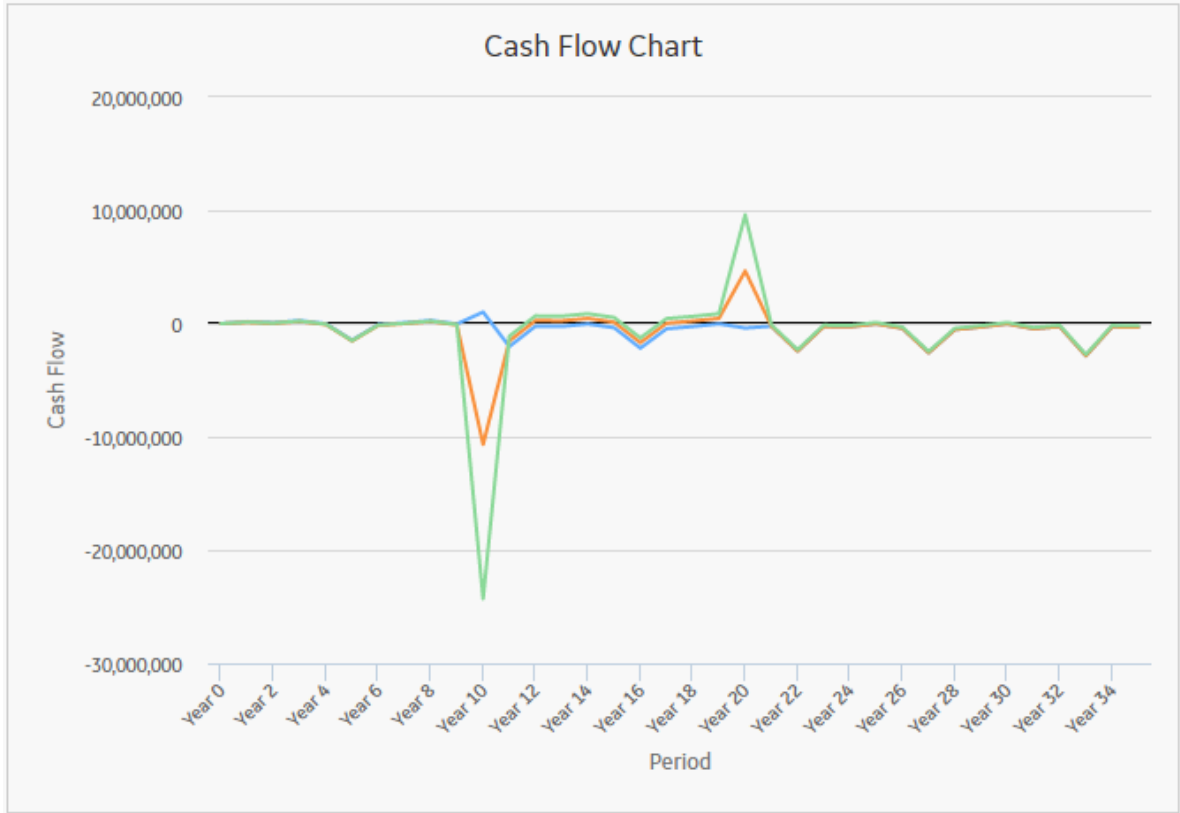 

Depreciated Value Chart

The Depreciated Value Chart displays Depreciated Values per period for each scenario, detailing how the value of the asset has been depreciated throughout the analysis. The chart allows you to assess the overall depreciation so that a corrective course of action can be determined.

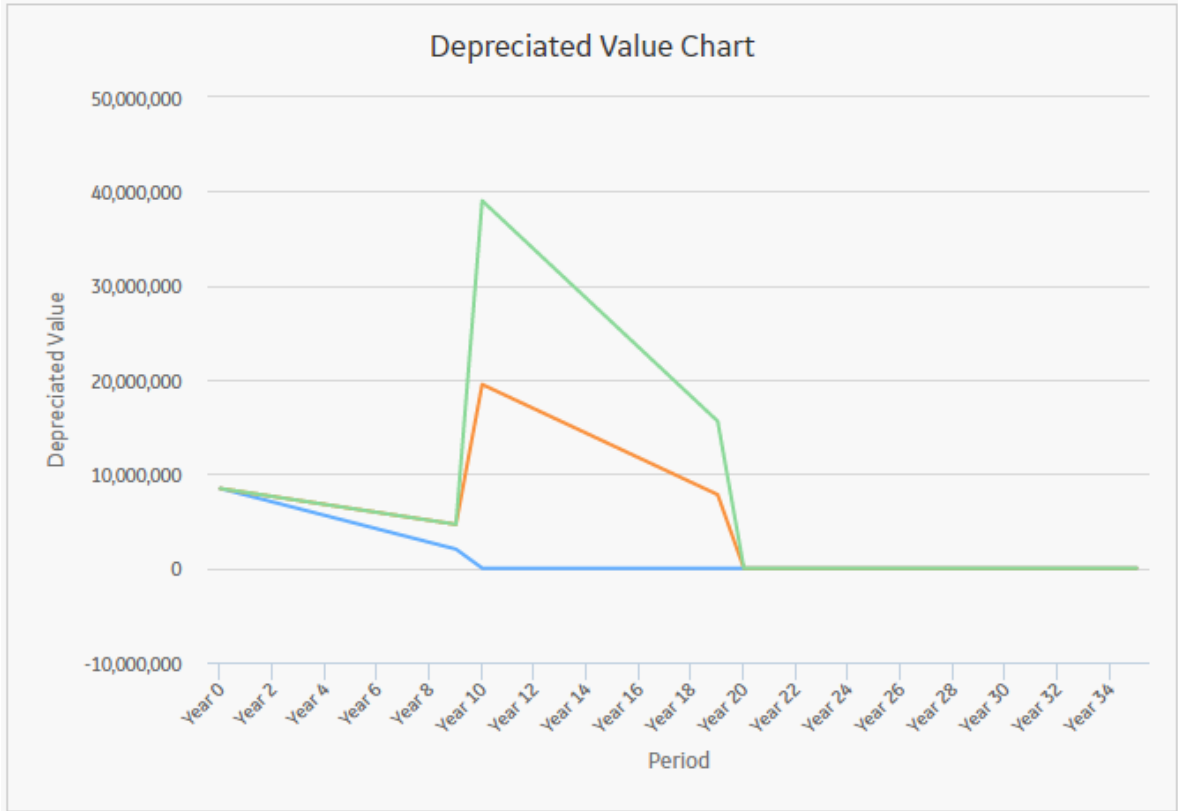 


Equivalent Unit Cost Chart

The Equivalent Unit Cost Chart displays the average cost per operating unit as it has changed across the analysis lifespan.




Operating Cost Chart

The Operating Cost Chart displays the trend, as well as the sum of all operating costs per period for each scenario. The chart allows you to review the overall operating costs of an Analysis and make decisions regarding future courses of action.

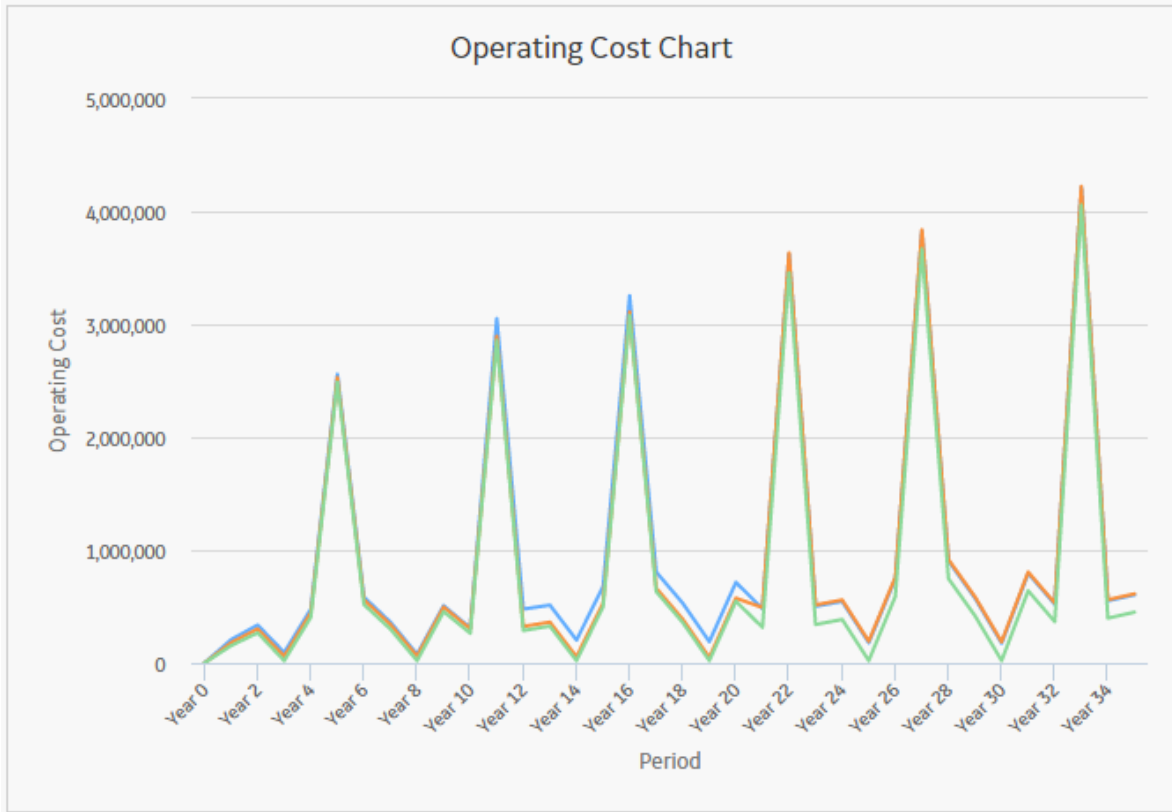 

Operating Cost Break Down Chart


The Operating Cost Break Down Chart displays stacked bars for each scenario that are broken down by element; these break down the operating costs by elements. The Break Down chart enables you to see where money is being spent within each scenario, identifying major cost drivers and target areas for cost reduction. If you hover over the individual operating costs, the title and details of the costs appear.

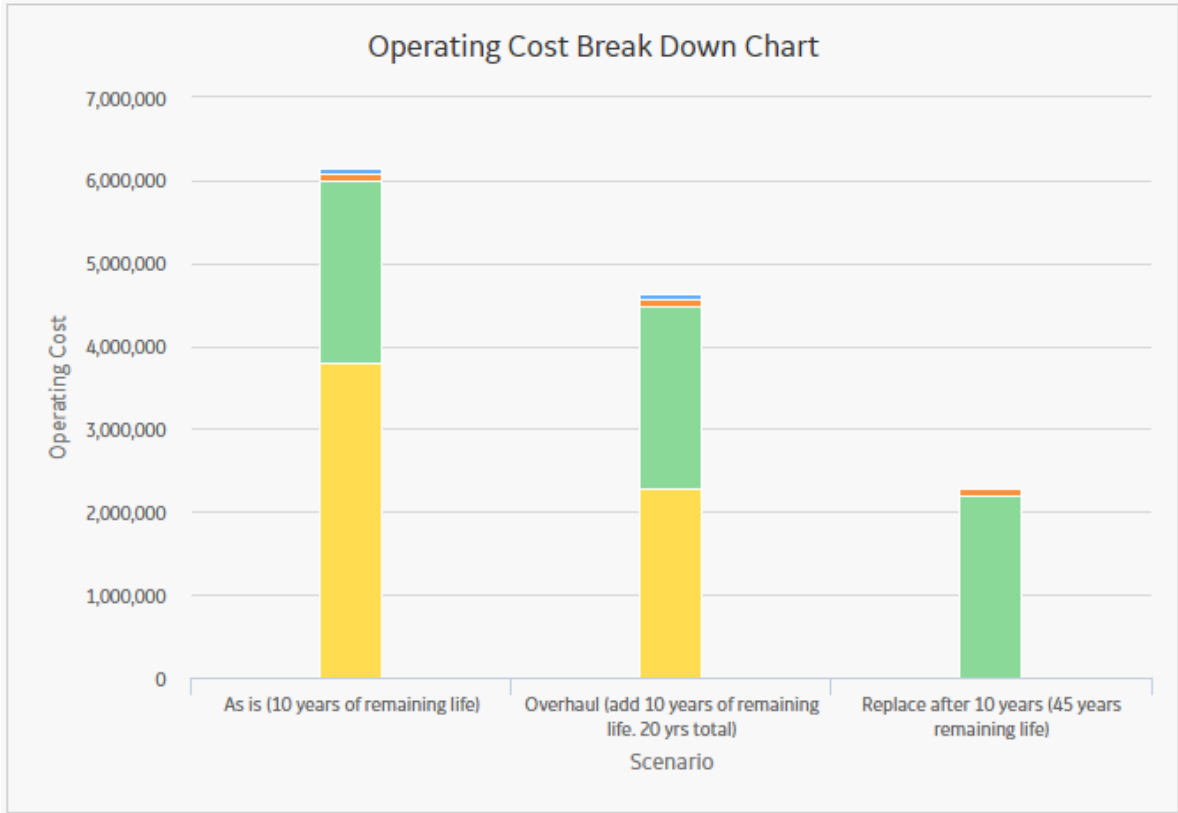 

Present Value Chart


The Present Value Chart displays Present Values per period for each scenario. Present values are determined based on the Interest Rate.

 The chart provides information to allow you to accurately view the expected worth of your Analysis based on the current Interest Rate.

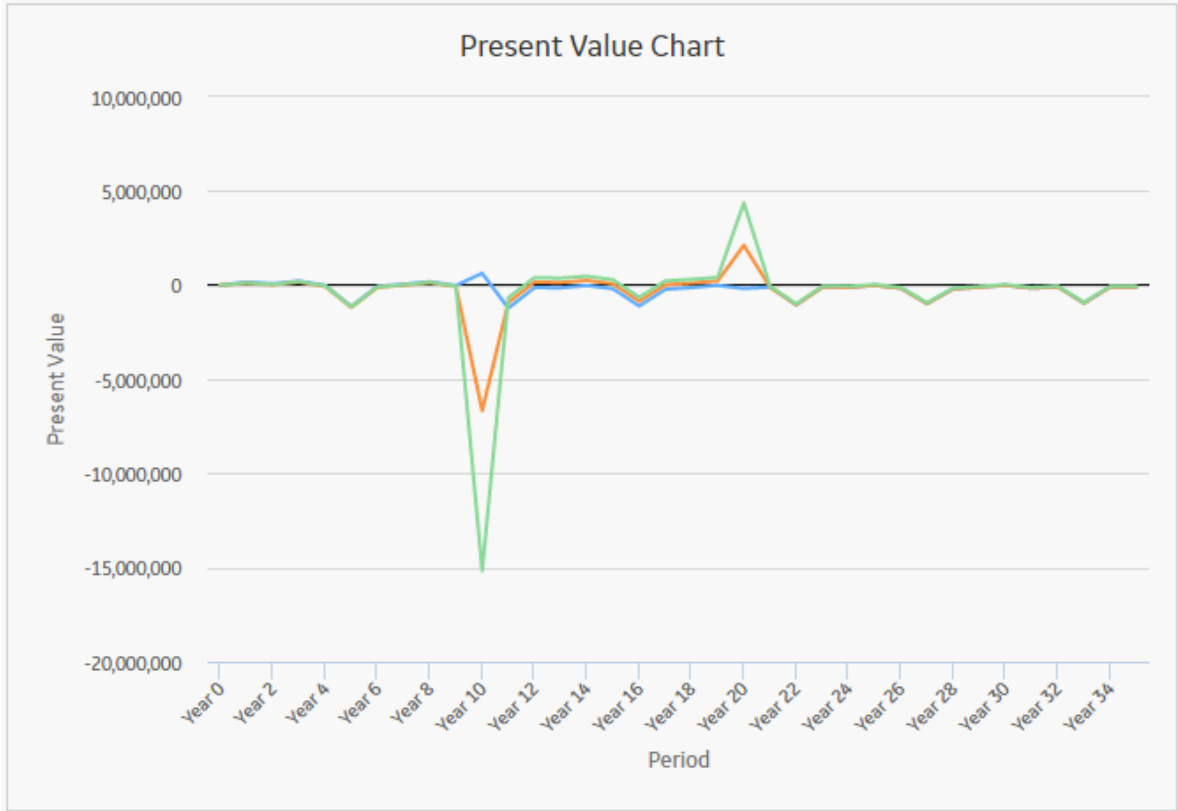


Remaining Planned Life

The Remaining Planned Life graph displays the amount of life that remains after consumption throughout a scenario, or all scenarios, in an analysis.

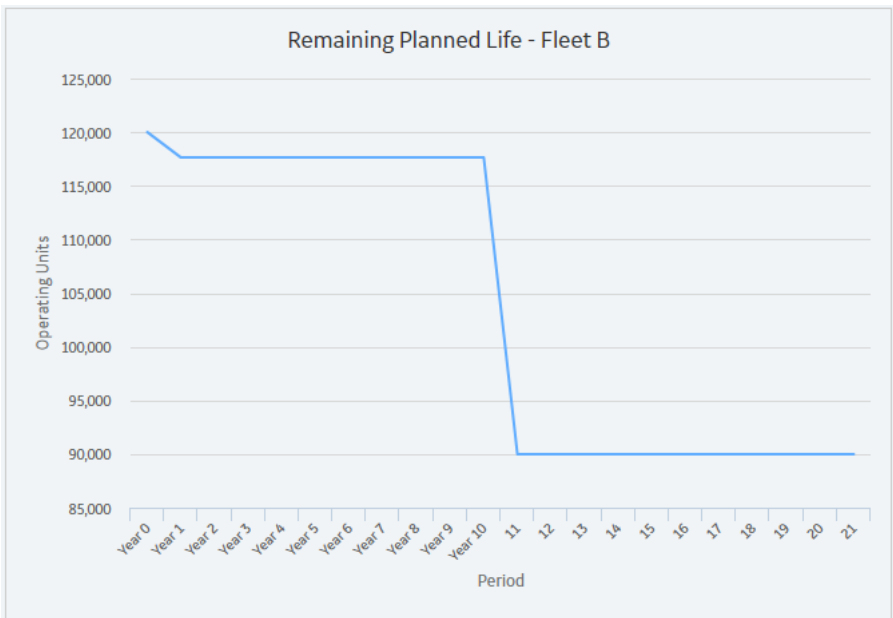 

Total Cost Chart

The Total Cost Chart displays the cumulative summary trend of the associated capital costs and operating costs for each scenario. The chart allows you to review the overall capital costs and operating costs of an Analysis and make decisions regarding future courses of action.

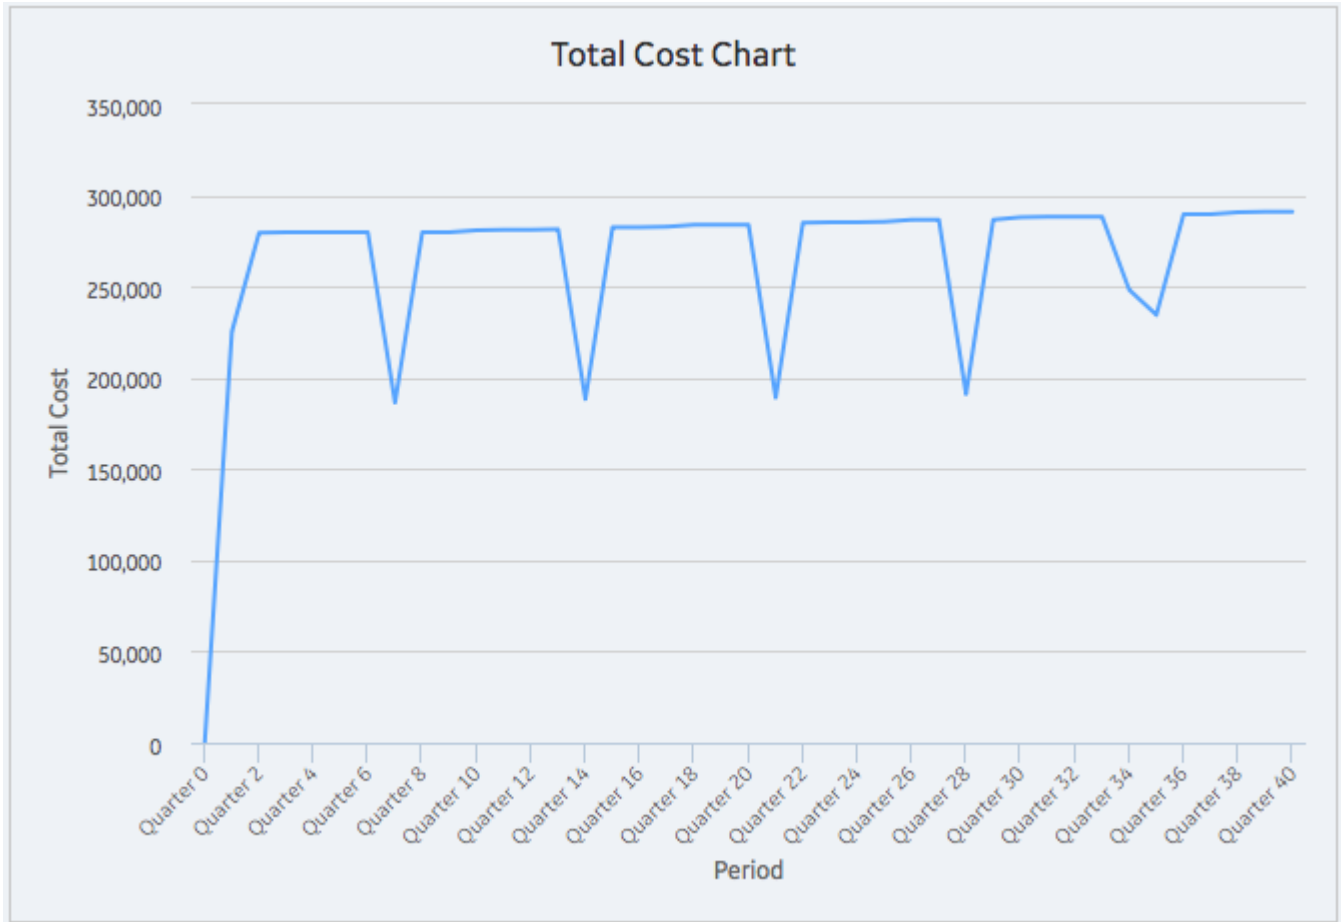 


Create an LCC Analysis

Procedure

1. [Access the LCC Overview page.](#)
2. In the upper-right corner of the page, select **New Analysis**, and then select one of the following options:

Option	
Basic Analysis	Select this option if you want to create a standard life cycle cost analysis.
Fleet Management	Select this option if you want to create an analysis to manage a fleet. This option provides a profile for each secondary element, start and end lives, additional calculated values for EUC and Remaining Life, and additional charts.


In a new page, the **Analysis Summary** workspace for the new analysis appears, displaying the **Definition** section.

3. As needed, enter values in the [available fields](#), and then select . The LCC Analysis is saved.


Modify an LCC Analysis

Procedure

1. [Access the LCC Analysis](#) that you want to modify.
2. Select the **Definition** tab. The **Definition** section appears.

 
3. Select .
4. As needed, modify the values in the [available fields](#).

Note: When modifying the value in the **Analysis Period Unit** box and Analysis length, the following occurs:

- When the Number of Periods field is modified to shorten the Analysis, columns are removed from the end of the Cost Data grid.
 - When the Number of Periods field is modified to lengthen the Analysis, empty columns are added to the end of the Cost Data grid.
 - When only the Start Date field is modified, the columns in the Cost Data grid will remain the same and only the dates in the **Definition** and **Summary** section will reflect the change.
 - When you modify the value in the **Analysis Period Unit** box, the data in the Cost Data grid is divided or aggregated based on the new unit of time that you specify. For example, if a unit was previously measured in years and is now measured in quarters, then the data in each row will be one fourth of what it was previously. For the Salvage Value row, the whole value will appear in the last quarter within the same year.
5. Select .
- The analysis is saved.

Delete an LCC Analysis


Procedure

1. [Access the LCC Overview page](#).
2. In the workspace heading, select the **LCC Analyses** tab.
The **LCC Analysis** section appears, displaying a list of available LCC Analyses.
3. Select the row for the analysis that you want to delete.
4. At the top of the workspace, select .
5. Select **Yes**.
The LCC Analysis is deleted from the GE Digital APM database.

Access Reference Documents in LCC

Procedure

 
1. [Access the LCC Analysis](#) whose Reference Documents you want to access.
2. In the workspace, select the **Reference Documents** tab.
A list of Reference Documents linked to the selected LCC Analysis appears.

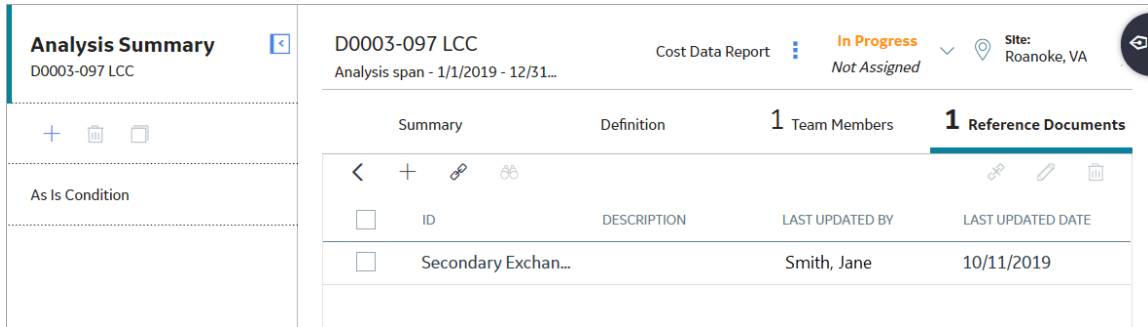

Access the LCC Team Members Section

Procedure

 
1. [Access the LCC Analysis](#) whose list of team members you want to access.
2. In the workspace, select the **Team Members** tab.
The **Team Members** section appears, displaying a list of team members assigned to the analysis.

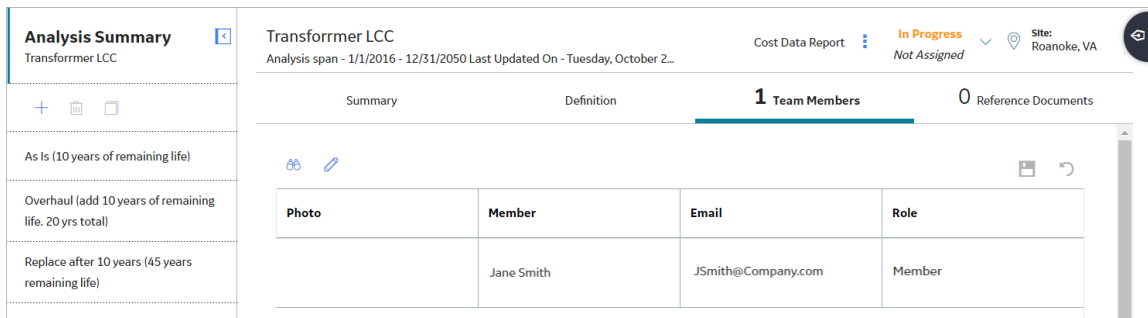

Tip: For details about working with teams and the **Team Members** section, refer to the Teams section of the documentation.

Access Recommendations in LCC

Procedure

1. [Access the LCC Analysis](#) whose list of team members you want to access.
2. Select the **LCC Analyses** tab.
The **LCC Analyses** section appears, displaying a list of available LCC Analyses.
3. Select the analysis for which you want to access Recommendations.
The **Analysis Summary** workspace for the selected analysis appears, displaying the **Summary** section.
4. Select .
The **Recommended Actions** pane expands.

Tip: For information about additional options available when working with recommendation records, refer to the Recommended Actions section of the documentation.

Resource Management

About Resource Management

Resource Management organizes all of the resources that have been applied to existing analyses in a central location within LCC to ensure easy access. Resource types include people, replacement parts, consumable parts, oils and lubricants, maintenance equipment, and tools.

Create a Resource

Procedure

1. Access the [LCC Overview](#) page.
2. Select **Resource Management**.
The **Resource Management** section appears, displaying a list of available resources.

The screenshot shows the 'Life Cycle Cost Analysis Overview' page. At the top, there is a navigation bar with 'Asset: Home' and a 'New Analysis' button. Below this, there are three main sections: 'LCC Analyses' (containing a '+', a trash icon, and a '2' indicator), 'My LCC Analyses' (containing a '1' indicator), and 'Resource Management' (containing a '1' indicator). Below the 'Resource Management' section, there is a table with the following data:

<input type="checkbox"/>	NAME	DESCRIPTION	CATEGORY	UNIT	UNIT COST
<input type="checkbox"/>	Fuel	Fuel	Parts	Gal	25

3. Select **+**.
The **Add Resource** window appears.

The 'Add Resource' window is shown with the following fields and controls:

- Resource Name:** A text input field with a red error message below it: "This is a Required Field."
- Description:** A large text area for entering details.
- Category:** A dropdown menu currently set to "Fuel".
- Unit:** A dropdown menu currently set to "Gal".
- Cost:** A text input field containing the value "1.00".

At the bottom right of the window, there are two buttons: "Cancel" and "Done".

4. As needed, enter values in the [available fields](#).
5. Select **Done**.
The resource is created.

 
Delete a Resource

About This Task

Note: If you are deleting a resource that has been applied to an LCC cost, then the cost will not be affected.


Procedure

1. Access the [LCC Overview](#) page.
2. Select **Resource Management**.
The **Resource Management** section appears, displaying a list of available resources.

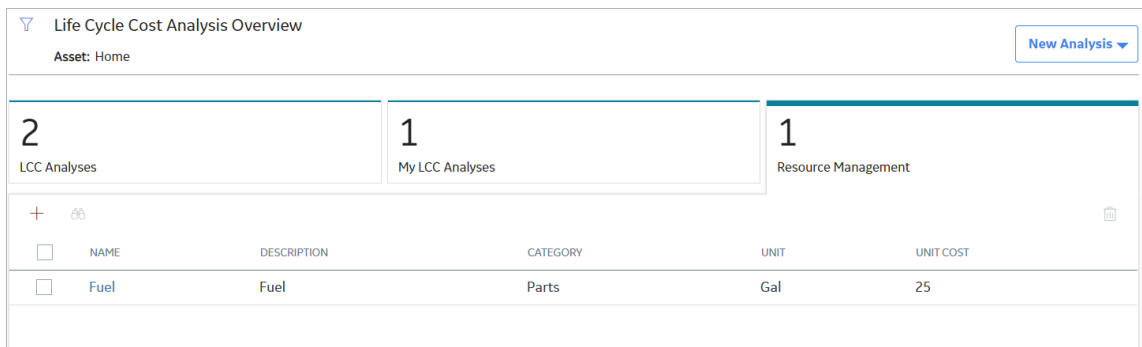

The screenshot shows the 'Life Cycle Cost Analysis Overview' page. At the top, there is a breadcrumb 'Asset: Home' and a 'New Analysis' button. Below this, there are three tabs: 'LCC Analyses' (with a '2' indicator), 'My LCC Analyses' (with a '1' indicator), and 'Resource Management' (with a '1' indicator). The 'Resource Management' tab is active, displaying a table with the following data:

<input type="checkbox"/>	NAME	DESCRIPTION	CATEGORY	UNIT	UNIT COST
<input type="checkbox"/>	Fuel	Fuel	Parts	Gal	25

3. Select the row containing the resource you want to delete, and then select .
4. Select **Yes**.
The resource is deleted.

Scenarios

About Scenarios

Scenarios are based on one or more assets or groups of assets that help evaluate the cost of ownership over defined accounting periods or planned asset life. An analysis can have one or many scenarios to cover all of the costs over the lifespan of an asset. On the [LCC Overview page](#), scenario performance can be compared when an analysis has more than one scenario.

Scenarios are made up of an [Operating Profile](#) and a Cost Data grid.

For example, a construction company owns a fleet of trucks and would like to assess the cost of trucks over a lifespan. A scenario will include different trucks based on their life expectancy. Within the scenario, the company will keep track of maintenance, repairs, and fuel usage to determine the exact cost of the truck in that scenario.

About Operating Profiles

Multiple Operating Profiles can be used within a scenario, enabling you to establish different revenue rates for different periods within the analysis. Profiles within scenarios define the production operating rate for a prescribed operating condition by allowing production output values to be added to an analysis. The analysis will then have a value to analyze asset ownership costs.

For example, assume that you have been tasked with determining the lifecycle costs of an air compressor. Your compressor will operate at one operating profile during the summer months and a second operating profile during the winter months, due to the greater density of air in winter. The two profiles allow the performance between two different time spans with different production rates to be captured.

About LCC Elements

Life Cycle Cost Analysis uses two different types of elements: primary and secondary. Elements are organized in a two level hierarchy with the primary level as the top level. One or many secondary elements can be added below the primary element, and all element costs are distributed up to the primary element and shown under the scenario calculated costs.

Primary Elements

Primary elements are assets that apply directly to the scenario and can be supplemented with an infinite amount of secondary elements.

Secondary Elements

Secondary elements are used to add other assets or groups of assets from the hierarchy to scenarios that will contribute to the operating cost. Secondary elements are subcomponents that contribute to the costs of a primary element.

For example, Hydraulics would be secondary elements to a haul truck, contributing to the overall cost of the primary element.

Costs	
> Calculated Values	
∨ Model 775	+
> Capital Cost	
> Operating Cost	+
> Hydraulics (9)	

About Asset Groups in LCC

When you create secondary elements in LCC, you can associate them with a single asset or a previously defined Asset Group. Multiple assets can be added and related by selecting an Asset Group.

For more information about the different Asset Group functions, refer to the Asset section of the documentation. Functions include, but are not limited to, creating and modifying an Asset Group.

Access a Scenario

Before You Begin


- [Create a Scenario](#)


Procedure

 
1. [Access the Analysis](#) containing the scenario that you want to access.
2. In the left pane, select a scenario.
The workspace for the selected scenario appears, displaying the **Scenario Definition** section.

Create a Scenario for an LCC Analysis

Procedure

1. [Access an LCC Analysis.](#)
2. In the left pane, select . The workspace for the new scenario appears, displaying the **Scenario Definition** section.

3. In the **Details** subsection, enter values in the **Scenario ID**, **Primary Element Name** boxes.
4. In the **Link to Hierarchy** box, select . The **Asset Finder** window appears.

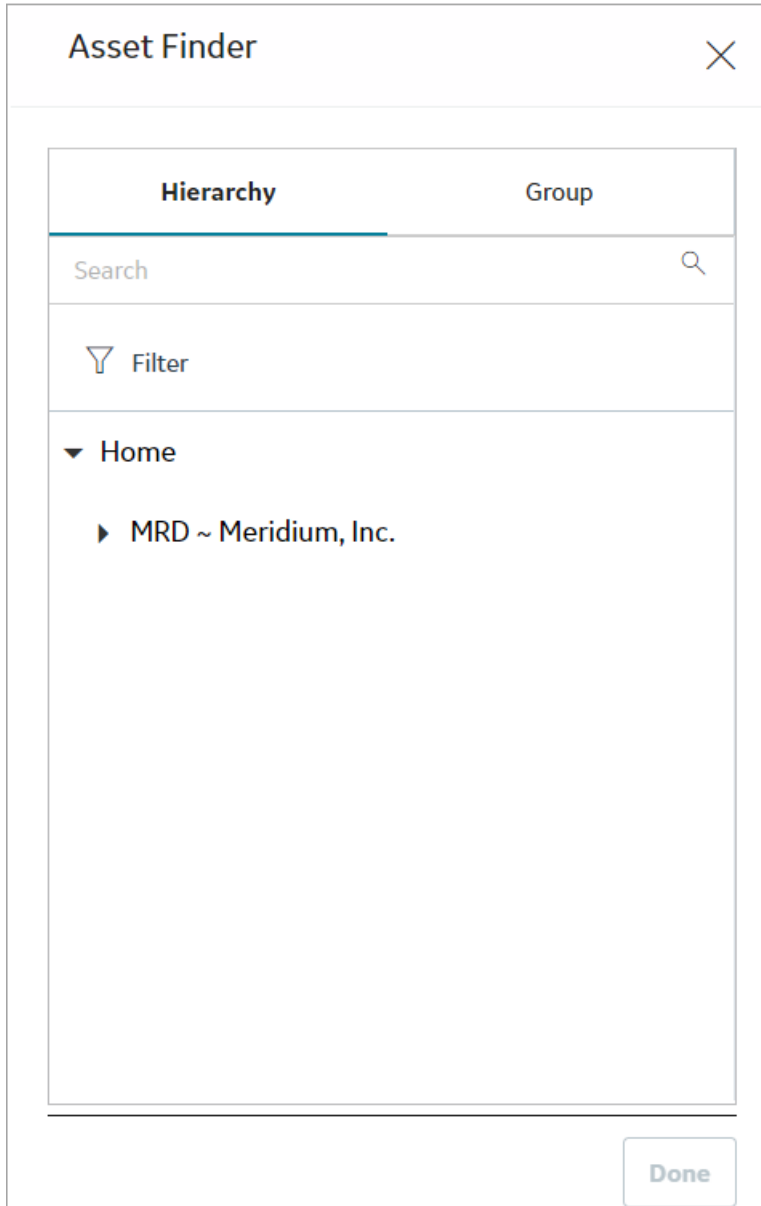

5. Navigate to and select an item in the hierarchy, and then select **Done**.

Note: The asset that you choose to link from the hierarchy is used to determine the relevant costs to be imported to the elements in the Cost Data grid.


6. In the **Operating Profile** subsection, complete the **Measurement Unit**, **Value of Unit**, **Measurement Frequency**, and **Rate Capacity** fields.

Tip: Once the Measurement Unit is entered, it is saved in a drop down list for future use.

7. In the **Operating Profile** subsection, in the grid, select **+**.
A new row appears in the grid.
8. In the new row, enter values in the **Profile Name**, **Operating %**, **From**, and **To** boxes.


Note: Profiles are used as the revenue model for the scenario; therefore, a warning message will appear if Profiles overlap or there is a gap where there is no associated profile. One or many Profiles can be created to cover the span of the analysis.

 
9. In the new row, if you want the profile to repeat annually, then select the **Repeat Annually** check box.

10. Select .
The scenario is saved.

Create a Scenario for a Fleet Analysis

Procedure

1. [Access an LCC Analysis](#).
2. In the left pane, select .
The workspace for the new scenario appears, displaying the **Scenario Definition** section.

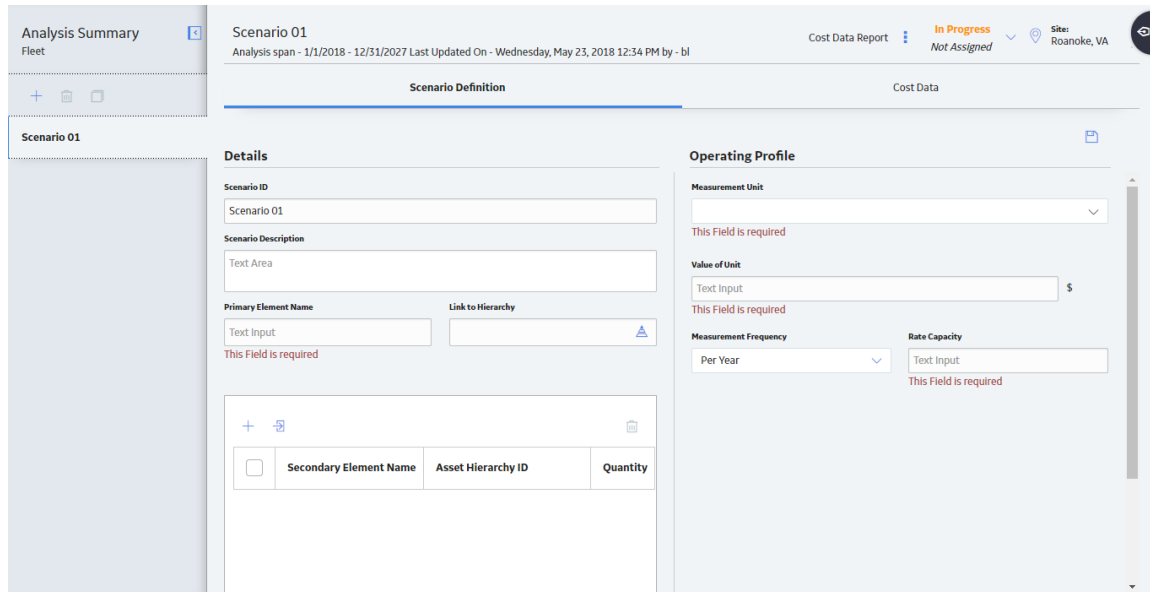


The screenshot shows the 'Scenario Definition' form for 'Scenario 01'. The form is divided into two main sections: 'Details' and 'Operating Profile'. The 'Details' section includes the following fields:

 
- Scenario ID:** A text input field containing 'Scenario 01'.
- Scenario Description:** A text area field.
- Primary Element Name:** A text input field with a red error message 'This Field is required' below it.
- Link to Hierarchy:** A text input field with a blue triangle icon to its right.

The 'Operating Profile' section includes the following fields:

- Measurement Unit:** A dropdown menu with a red error message 'This Field is required' below it.
- Value of Unit:** A text input field with a '\$' symbol to its right and a red error message 'This Field is required' below it.
- Measurement Frequency:** A dropdown menu with 'Per Year' selected.
- Rate Capacity:** A text input field with a red error message 'This Field is required' below it.



Below the 'Details' section, there is a table with the following columns: 'Secondary Element Name', 'Asset Hierarchy ID', and 'Quantity'. The table is currently empty.

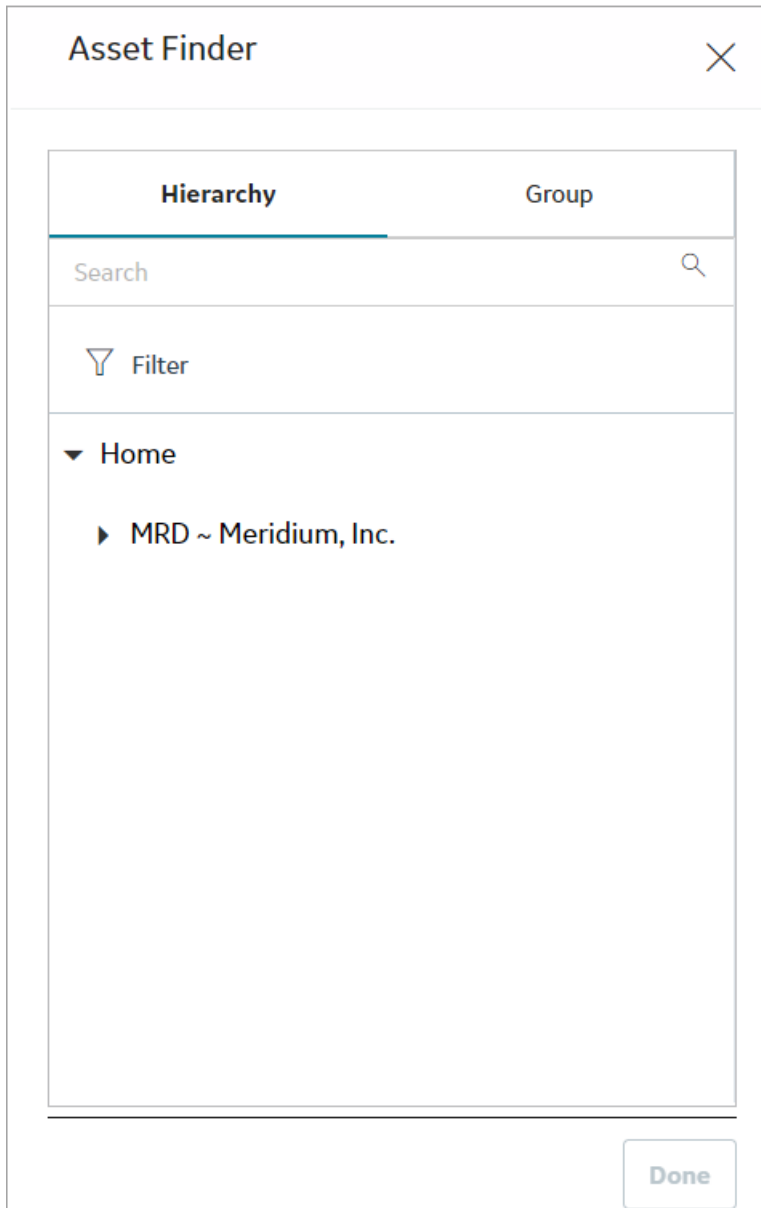
3. In the **Details** subsection, enter values in the **Scenario ID**, **Primary Element Name** boxes.
4. In the **Link to Hierarchy** box, select .
The **Asset Finder** window appears.



5. Navigate to and select an item in the hierarchy, and then select **Done**.

Note: The asset that you choose to link from the hierarchy is used to determine the relevant costs to be imported to the elements in the Cost Data grid.

 6. In the grid, select select .
A new row appears.
7. Enter a **Secondary Element Name**.
8. To associate the secondary element with either an Asset or an Asset Group, in the Asset Hierarchy ID cell, select .
The **Asset Finder** window appears.

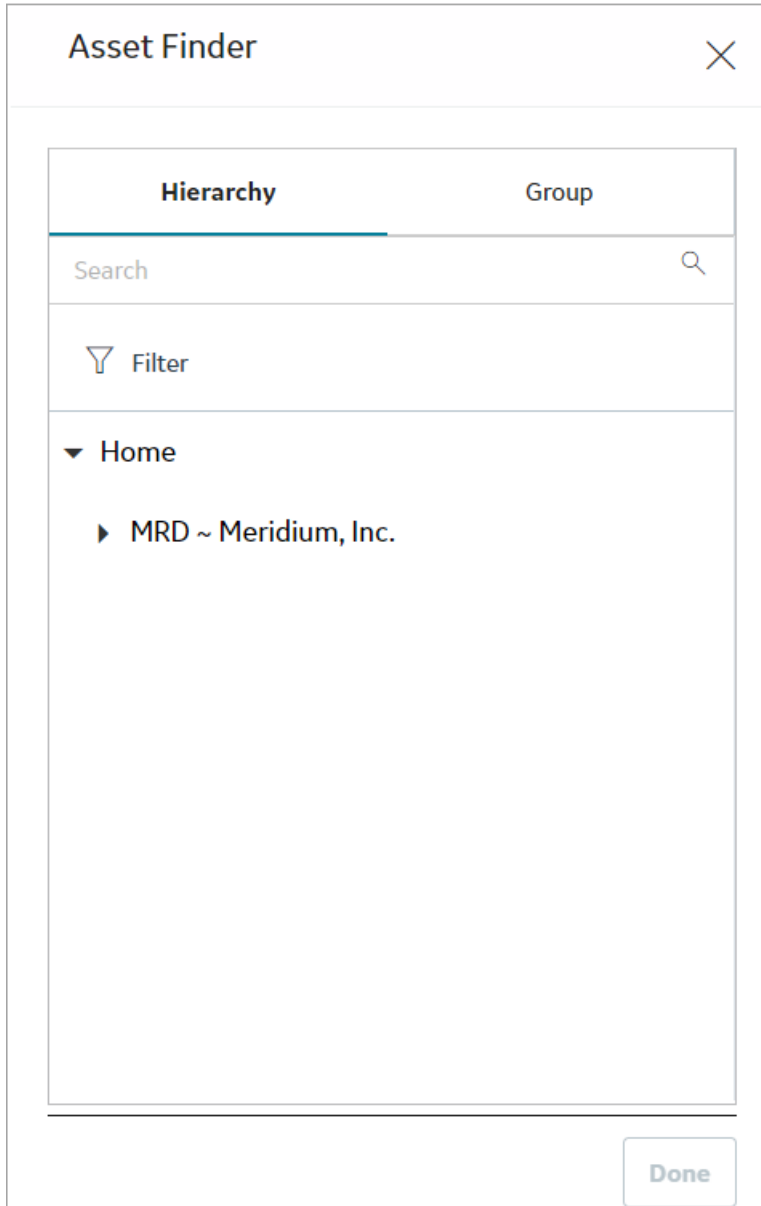

9. Navigate to an Asset or Asset Group in the hierarchy, and then select the asset or asset group from the list.

Note: The asset that you choose to link from the hierarchy is used to determine the relevant costs to be imported to the elements in the Cost Data grid.

10. Select **Done**.

The Asset Hierarchy ID field is populated with a link, and the Quantity field is populated with a value of 1 automatically.


Note: The hyperlink for an Asset or Asset Group displays the asset or asset group's datasheet in the record explorer. The Quantity can be manually modified by entering a new number in the field. Every cost, entered or imported, is multiplied by the Quantity in the element's cost summary row.

11. In the **Operating Profile** subsection, complete the **Measurement Unit**, **Value of Unit**, **Measurement Frequency**, and **Rate Capacity** fields.

Tip: Once the Measurement Unit is entered, it is saved in a drop down list for future use.

12. Select the row of the secondary element for which you want to enter the operating rate.

Note: The **Operating Rate For** subsection is enabled once a secondary element is selected.

13. In the **Operating Profile** subsection, in the grid, select .

A new row appears.

14. In the new row, enter values in the **Profile Name, Operating %, From, and To** boxes.

Note: Profiles are used as the revenue model for the scenario; therefore, a warning message will appear if Profiles overlap or there is a gap where there is no associated profile. One or many Profiles can be created to cover the span of the analysis.

15. In the new row, if you want the profile to repeat annually, then select the **Repeat Annually** check box.


16. Select .

The scenario is saved.

Create a Profile

Procedure

1. [Access the Scenario](#) for which you want to create a profile.

2. In the **Operating Profile** subsection of the **Scenario Definition** section, select .
A new row appears in the grid.

3. In the new row, enter values in the **Profile Name, Operating %, From, and To** boxes.

Note: Profiles are used as the revenue model for the scenario; therefore, a warning message will appear if Profiles overlap or there is a gap where there is no associated profile. One or many Profiles can be created to cover the span of the analysis.

4. In the new row, if you want the profile to repeat annually, then select the **Repeat Annually** check box.


5. Select .

The profile is created.

Create a Secondary Element

Procedure

1. [Access the Scenario](#) to which you want to create a secondary element.

2. In the **Details** subsection, in the upper-left corner of the grid, select .
A new row appears in the grid.

Analysis Summary
Transformer LCC

Replace after 10 years (45 years remaining life)

Overhaul (add 10 years of remaining life, 20 yrs total)

As is (10 years of remaining life)

Replace after 10 years (45 years remaining life)

Analysis span - 1/1/2016 - 12/31/2050 Last Updated On - Tuesday, July 19, 2016 2:04 PM by -

Scenario Definition

Details

Scenario ID
Replace after 10 years (45 years remaining life)

Scenario Description
Text Area

Primary Element Name
Transformer Power

Link to Hierarchy

<input type="checkbox"/>	Secondary Element Name	Asset Hierarchy ID	Quantity
<input type="checkbox"/>	Transformer Group	Transformer Group (for LCC)	13
<input type="checkbox"/>			1

Operating Profile


Measurement Unit
KWH


Value of Unit
0.025 \$

Measurement Frequency
Per Hour

Rate Capacity
750


<input type="checkbox"/>	Profile Name	Operating %	From	To	Repeat Annually
<input type="checkbox"/>	Typical	90.00	1/1/2016	6/30/2016	<input checked="" type="checkbox"/>
<input type="checkbox"/>	Peak	100.00	7/1/2016	9/15/2016	<input checked="" type="checkbox"/>
<input type="checkbox"/>	Typical	90.00	9/15/2016	12/31/2016	<input checked="" type="checkbox"/>

 3. Enter a **Secondary Element Name**.
4. To associate the secondary element with either an Asset or an Asset Group, in the **Asset Hierarchy ID** cell, select . The **Asset Finder** window appears.

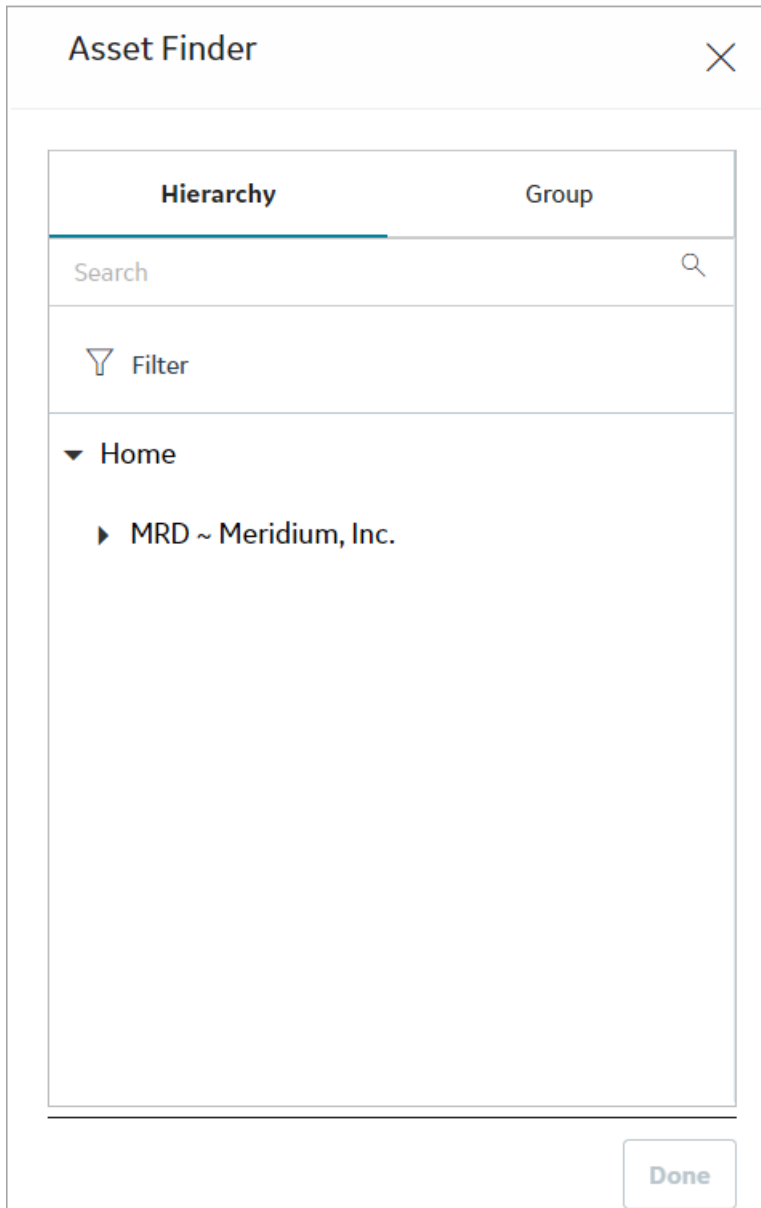

Delete a Secondary Element

Procedure


1. [Access the Scenario](#) from which you want to delete a secondary element.
2. In the row for the secondary element that you want to delete, select the check box, and then select .
A confirmation message appears.
3. Select **OK**.
The selected secondary element and all links to assets or groups created when the element was added are deleted.

 
Import Scenario Elements Into an Analysis

About This Task

You can use the import feature within the **Scenario Definition** section to create a new, comprehensive analysis by adding primary and secondary elements from previously created analyses. These will appear as secondary elements in the target scenario.

Procedure

1. Access the scenario into which you want to import a previously created scenario's elements.
2. In the **Details** subsection, select . The **Import Secondary Elements** window appears, displaying a list of scenarios. The list is comprised of scenarios with the same site, start date, period type, and number of periods as the target analysis.

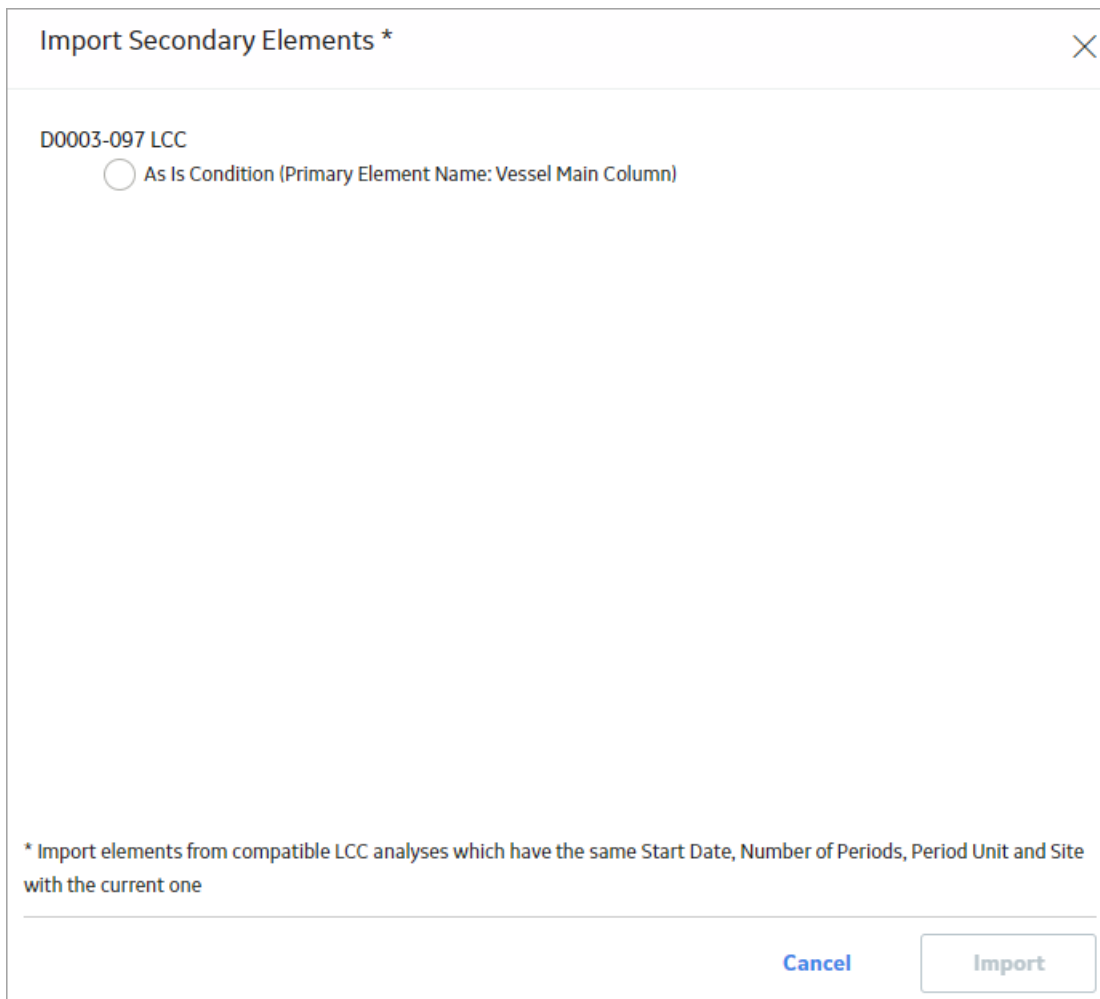

Import Secondary Elements *

D0003-097 LCC

As Is Condition (Primary Element Name: Vessel Main Column)


* Import elements from compatible LCC analyses which have the same Start Date, Number of Periods, Period Unit and Site with the current one


Cancel Import

3. Select the scenario that contains elements you want to import into the analysis, and then select **Import**. The primary and secondary elements from the selected scenario appear in the **Details** subsection. In addition, all associated capital and operating costs for the imported elements are imported.

Copy a Scenario Within an Analysis


Procedure

1. [Access a Scenario](#).
2. In the left pane, select .
A confirmation message appears.
3. Select **Yes**.
The workspace for the copied scenario appears, displaying all the copied information from the original scenario. The scenario is saved, with its name based on the following format: <Name of the original scenario> Copy

If you want to change the name of the scenario, you can enter the new name in the Scenario ID field, and then select .


Delete a Profile

Procedure

1. [Access the Scenario](#) containing the profile that you want to delete.
2. In the **Profile** section grid, select the check box beside the profile that you want to delete.
3. Select .
A confirmation message appears.
4. Select **Yes**.
The profile is deleted and its associated revenues are removed from the cost data grid.

Delete a Scenario

Procedure

1. [Access the LCC Analysis](#) containing the scenario that you want to delete.
2. In the left pane, select the scenario that you want to delete, and then select .
A confirmation message appears.
3. Select **Yes**.
The scenario is deleted.

Cost Data

About Cost Data

Cost Data includes all of the costs that an Asset or Group of Assets will incur throughout the life span of an asset. It is essential that all Cost Data is collected before and throughout the LCC Analyses to maximize reliability and accuracy.

Example

For example, if the asset is a fleet of service vehicles, you would want to collect the following types of Cost Data:

- Maintenance Costs
- Replacement Parts
- Energy Costs
- Driver Costs

By collecting all of the above Cost Data, you can create an analysis to maintain, track, and predict costs throughout the lifespan of the fleet of service vehicles.

About Operating Costs

Blank Rows

Blank rows provide the option to add costs to the grid and apply them the applicable period(s).

Known Interval/Cost

Known interval cost data provides the ability for you to track the ongoing costs that occur on a regular basis.

For example, a fleet of trucks have their air filters changed every 6 months. Air filter maintenance can be logged in the cost data grid by adding a Known Interval/cost and continued every 6 months for the life of the truck.

Distributed Costs


Distributed costs can be added where the user has the option to specify the distribution type and distribution parameters. The application of these costs will distribute the mean cost over all periods within the scenario based upon the shape of the distribution that was specified.

In a scenario with 10 yearly periods, where the user elects to apply a distributed cost with the following parameters:

- Mean Cost: 50000
- Distribution Type Weibull
- Beta: 1.25
- Eta: 72 (months)
- Gamma: 0

The costs would be applied as follows:

Period	Cost
Period 1	5051
Period 2	6137
Period 3	5975
Period 4	5463
Period 5	4823
Period 6	4158
Period 7	3521
Period 8	2940
Period 9	2425
Period 10	1981

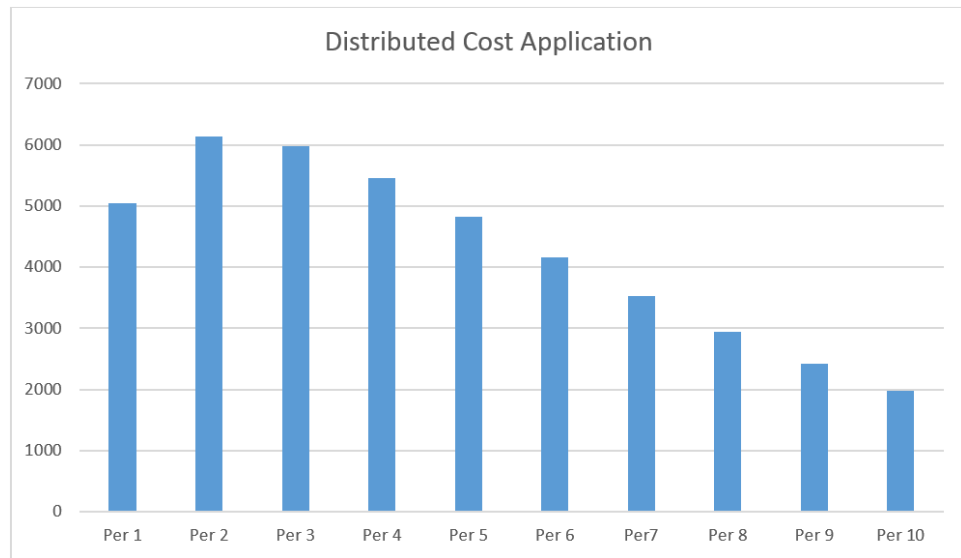 

About Import Cost Data

In LCC, you are able to import cost data from sources including Work Histories, Strategy Actions, Production Events, and Datasets. Importing cost data in various forms allows you to evaluate the Total Cost of Ownership for an asset with all of the information in the Cost Data grid.

Possible Cost Data you may want to import:

- Equipment Failures.
- Shutdowns and Slowdowns + Maintenance actions.
- Insurance costs.
- Fuel/Energy usage.

About Calculated Values

Calculated Values are located at the top of the Cost Data grid and are automatically factored or calculated from data from the Primary Element and Secondary Elements. Calculated values provide a mathematical summation of the costs associated with each of the elements within the analysis.

Calculated Values Include:

- [Capital Costs](#)
- [Operational Costs](#)
- [Total Depreciated Values](#)
- [Revenue](#)
- [Cash Flow](#)
- [Present Value](#)
- [Planned Unit Consumption](#)
- [Equivalent Unit Cost](#)

Access a Cost Data Grid

Before You Begin

- [Create a Scenario](#)

Procedure

1. [Access a Scenario](#).
2. Select **Cost Data**.
The **Cost Data** section appears, displaying the **Cost Data** grid.

Note: The unit displayed in grid heading (i.e., quarters, months, or years) is based on the Analysis Period Unit that you selected when you [created the analysis](#).

Analysis Summary		Model 775		Cost Data Report		In Progress		Site: Roanoke, VA	
Fleet Analysis (haul truck...)		Analysis span - 1/1/2016 - 12/31/2025 Last Updated On - Tuesday, July 19, 20...		Not Assigned					
Scenario Definition		Cost Data							
Model 830e		NPV = 1,899,403 IRR = N/A TCO = 2,358,740 EUC = N/A							
Costs	Total	Year 0	Year 1	Year 2	Year 3	Year 4			
> Calculated Values									
Model 775 +	2,749,749	0	463,667	431,629	348,859	281,331			
> Capital Cost									
> Operating Cost +									
> Operating Units									
> Hydraulics (12)	590,033	0	147,133	90,166	64,566	51,741			
> Electrical (12)	177,449	0	17,877	24,735	23,969	18,101			
> Wheels/Tires (72)	468,000	0	0	0	0	0			

Create a Resource

Procedure

1. [Access a Cost Data grid.](#)
2. In the cell for the Cost Element to which you want to add a resource, select **+**, and then select **Add a New Resource.**

The **Create a New Resource** window appears.

Create New Resource

Create Resource Apply Resource

Resource Name

This is a Required Field.

Description

Category Unit Cost

Fuel 1.00

This is a Required Field.

Next

3. As needed, enter values in the available fields, and then select **Next.**
The **Apply Resource** section appears.

Create New Resource
✕

Create Resource

Apply Resource

+
🗑️

	Resource (Unit Cost / Unit)	Quantity	Consumption Unit	Period Usage	Periods	Cost Per Period
<input type="checkbox"/>	Mechanic	1	Each ▼	1	eg: 1 or 1,3,5	15.00

Previous

Finish

4. Enter values in the **Quantity**, **Consumption Unit**, **Period Usage**, and **Periods** boxes, and then select **Finish**.
The new resource is added.

Add an Existing Resource

Procedure

1. [Access a Cost Data grid](#).
2. In the cell for the Cost Element to which you want to add a resource, select +, and then select **Add Existing Resource**.
The **Select Resources** section appears.

Import Resources
✕

Select Resources
Apply Resource

NAME	DESCRIPTION	TYPE	RATE	UNIT COST
<input type="checkbox"/>	Electrician	Electrician	Labor	Hours 75.00
<input type="checkbox"/>	Fuel (Diesel)	Diesel Fuel	Fuel	Gal 2.75
<input type="checkbox"/>	Tire (Haul Truck)	Tire (Haul Truck)	Parts	Ea 375.00

1 - 3 of 3 Results
← Page 1 of 1 →

3. Beside each resource that you want to add, select the check box, and then select **Next**. The selected resources appear in the **Apply Resource** section.
4. Enter values in the **Quantity**, **Consumption Unit**, **Period Usage**, and **Periods** boxes.

If you want to add another resource, select **+**.

5. Select **Finish**. The selected resources are added.

Create a Secondary Element in the Cost Data Grid

Procedure

1. [Access a Cost Data grid](#).
2. In the primary element cell, select **+**.
The **Add Secondary Element** window appears.

Add Secondary Element

Secondary Element

Text Input


Name can not be empty.

Quantity

1

Asset Hierarchy ID


Select an Asset



Cancel

OK

3. If you want to add an element that is listed in the hierarchy:

- a. Beside the **Asset Hierarchy ID** box, select . The **Hierarchy** window appears.
- b. Navigate to and select an Asset, and then select **Done**.
- c. Enter values in the **Secondary Element** and **Quantity** boxes.

Note: Quantity, which has a default of 1, is used as a multiplier. For example, if the quantity is equal to 10, all of the operating and capital costs are multiplied by 10.

- d. On the **Add Secondary Element** window, select **OK**.

-or-

If you want to add an element that is not listed in the hierarchy:

- a. Enter values in the **Secondary Element** and **Quantity** boxes, and then select **OK**.

Important: When adding an asset not listed in the hierarchy, the import features may not have the context needed to function and will return null results.


The secondary element appears in the Cost Data grid.

Copy a Secondary Element

Procedure

1. [Access a Cost Data grid](#) that contains at least one secondary element.
2. Select the row that contains the secondary element that you want to copy.

The selected row is highlighted.

3. In the upper-right corner of the **Cost Data** section, select .

The **Copy selected item?** dialog box appears, asking you to confirm that you want to copy the selected secondary element.

4. Select **Yes**.

The copied secondary element appears in the Cost Data grid and in the **Details** subsection of the **Scenario Definition** section.

Note: The quantity of the new secondary element will be set to 1, regardless of the quantity of the secondary element you copied. The asset associated with the original secondary element will be removed.

Create Operating Costs Manually

Procedure

- Create a Blank Row
 1. [Access a Cost Data grid.](#)
 2. In the **Operating Cost** cell, select **+**, and then select **Blank Row**.
A new row appears.

Costs	Total	Year 0	Year 1	Year 2
> Calculated Values				
Model 775 +	2,749,749	0	463,667	431,629
> Capital Cost				
Operating Cost +				
new cost +			<input type="text"/>	<input type="text"/>
> Operating Units				
> Hydraulics (12)	590,033	0	147,133	90,166
> Electrical (12)	177,449	0	17,877	24,735

3. In the new row, enter values in the cells.
- Create a Known Interval/Cost
 1. [Access a Cost Data grid.](#)
 2. In the **Operating Cost** cell, select **+**, and then select **Known Interval/Cost**.
The **Add Known Interval Cost** window appears.

Add Known Interval Cost
✕

Cost Name

Cost

Interval

Interval Unit

Start Date

Cancel
OK

3. Enter values in the **Cost Name, Cost, Interval, Interval Unit, Start Date** boxes.
 4. Select **OK**.
The Known Interval Cost is added in a new row in the Cost Data grid according to the interval within the analysis period row or column.
- Create a Distributed Cost
 1. [Access a Cost Data grid.](#)
 2. In the **Operating Cost** cell, select **+**, and then select **Distributed Cost**.
The **Add Distributed Cost** window appears.

Add Distributed Cost
✕

Cost Name

Mean Cost

Interval Unit

Interval Distribution Type

Beta

Eta

Gamma

Cancel
OK

3. As needed, modify the **Cost Name**, **Mean Cost**, **Interval Unit**, **Interval Distribution Type**, **Beta**, **Eta**, and **Gamma** boxes, and then select **OK**.
Based on the Interval Distribution Type selection, the Distributed Cost is added in a new row to the Cost Data grid.

Import Cost Data

About This Task

Important: To execute this procedure, membership in Security Groups additional to those normally associated with this module is required. For more information, please see the Security Groups topic.

Procedure

- Import Work History
 1. [Access a Cost Data grid](#).
 2. In the element section to which you want to add cost data, in the **Operating Cost** cell, select **+**, and then select **Import Data**.

The **Import Operating Cost Data** window appears.

Import Operating Cost Data ✕

Import Source / Data Selection / Data Mapping / Confirmation

Select import type:

- Work History
- Strategy Action
- Production Event
- Dataset

[Next](#)

3. Depending on the type of source that you want to import, select the **Work History**, **Strategy Action**, **Production Event**, or **Dataset** check box.
4. Select **Next**.
Based on the assets associated with the element, a list of work history events and their associated event types and costs appears.

Import Operating Cost Data ✕

Import Source / Data Selection / Data Mapping / Confirmation

⌕

<input type="checkbox"/>	EVENT ID	EVENTY...	EVENT START DA...	TOTAL CO...	ASSET ID
<input type="checkbox"/>	WH-40032992-80018800	Repair	11/7/2014	0.00	D0003-097 ~ 000000000001056788 ~ VESSEL
<input type="checkbox"/>	WH-40037552-80023360	Repair	8/21/2014	678.00	D0003-097 ~ 000000000001056788 ~ VESSEL
<input type="checkbox"/>	WH-40044618-80030426	Repair	8/2/2014	4,209.00	D0003-097 ~ 000000000001056788 ~ VESSEL
<input type="checkbox"/>	WH-40048686-80034494	Repair	8/23/2013	1,844.00	D0003-097 ~ 000000000001056788 ~ VESSEL
<input type="checkbox"/>	WH-40053434-80039242	Repair	1/24/2013	0.00	D0003-097 ~ 000000000001056788 ~ VESSEL
<input type="checkbox"/>	WH-40058288-80044096	Repair	3/2/2014	0.00	D0003-097 ~ 000000000001056788 ~ VESSEL

Rows per page: 50 200 500
 1 - 6 of 6 Results < >

Previous
Next

5. Select the work history events that you want to import, and then select **Next**. The **Data Mapping** section appears.

Import Operating Cost Data ✕

Import Source Data Selection **Data Mapping** Confirmation

Data Mapping

Cost ID
Event ID ▼

Cost
Total Cost ▼

Date
Event Start Date ▼

Review Period

Start Date
8/2/2014 📅

End Date
11/7/2014 📅

[Previous](#) [Next](#)

6. In the **Start Date** and **End Date** boxes, select dates to set the Review Period for the events you are importing, then select **Next**.
A list of the costs that you are importing appears.

Import Operating Cost Data
✕

Import Source
Data Selection
Data Mapping

Confirmation

COST NAME	DATE	COST	EVENTTYPE	ASSET ID
WH-40032992-80018800	11/7/2014	0.00	Repair	D0003-097 ~ 0000000000010567
WH-40037552-80023360	8/21/2014	678.00	Repair	D0003-097 ~ 0000000000010567
WH-40044618-80030426	8/2/2014	4,209.00	Repair	D0003-097 ~ 0000000000010567

1 - 3 of 3 Results
← Page 1 of 1 →

Individual Costs
 Group Costs and Sum Total

Previous

Finish

7. Depending on how you want the data to be displayed in the grid, select **Individual Costs** or **Group costs and sum total**.
 If **Individual Costs** is selected, then each selected event will add a new row to the Cost Data grid.
 If **Group costs and sum total** is selected, then all selected action costs are summed by year number and inserted into grid as one row.
 8. Select **Finish**.
 The selected cost data is imported to the Cost Data grid and repeated every review period until the end of the analysis with cost inflation applied.
- Import Strategy Action Costs
 1. [Access a Cost Data grid](#).
 2. In the element section to which you want to add cost data, in the **Operating Cost** cell, select **+**, and then select **Import Data**.
 The **Import Operating Cost Data** window appears.

Import Operating Cost Data

Import Source Data Selection Data Mapping Confirmation

Select import type:

Work History

Strategy Action

Production Event

Dataset

Next

3. Depending on the type of source that you want to import, select the **Work History**, **Strategy Action**, **Production Event**, or **Dataset** check box.
4. Select **Next**.
A list of Strategy Actions related to the asset or asset group selected in the primary or secondary element appears.

Import Operating Cost Data ✕

Import Source

Data Selection

Confirmation

<input type="checkbox"/>	ACTION NAME	ACTION TY...	INTERV...	INTERVAL UNI...
<input type="checkbox"/>	INTERNAL VISUAL INSPECTION	CM	120.00	Months
<input type="checkbox"/>	Periodic Proof Test of Main Fractionator HIP...		60.00	Months
<input type="checkbox"/>	ULTRASONIC SHEAR WAVE TESTING	CM	60.00	Months
<input type="checkbox"/>	ULTRASONIC THICKNESS TESTING	CM	120.00	Months

1 - 10 of 10 Results
← Page 1 of 1 →

Previous
Next

5. Beside each Strategy Action that you want to import, select the check box, and then select **Next**. The Strategy Actions associated with the asset will only appear in the list if the strategy is currently active.
The **Confirmation** screen appears displaying the list of Strategy Actions that you selected and their associated costs.

Import Operating Cost Data
✕

Import Source
Data Selection
Confirmation

ACTION NAME	ACTION TYPE	INTERVAL	INTERVAL UNITS
INTERNAL VISUAL INSPECTION	CM	120.00	Months
Periodic Proof Test of Main Fractionator HIP...		60.00	Months

1 - 2 of 2 Results
← Page 1 of 1 →

Individual Costs
 Group Costs and Sum Total

Previous

Finish

6. Select **Individual Costs** or **Group costs and sum total**, depending on how you want the data to be displayed in the grid.

If **Individual Costs** is selected, each selected action will add a new row to the cost grid. If **Group costs and sum total** is selected, all selected action costs are summed by year number and inserted into grid as one row.
 7. Select **Finish**.

The selected cost data is imported to the Cost Data grid.
- Import Production Event Costs
 1. [Access a Cost Data grid](#).
 2. In the element section to which you want to add cost data, in the **Operating Cost** cell, select **+**, and then select **Import Data**.

The **Import Operating Cost Data** window appears.

Import Operating Cost Data ✕

Import Source / Data Selection / Data Mapping / Confirmation

Select import type:

- Work History
- Strategy Action
- Production Event
- Dataset

[Next](#)

3. Depending on the type of source that you want to import, select the **Work History**, **Strategy Action**, **Production Event**, or **Dataset** check box.
4. Select **Next**.
A list of Production Events appears based on the event, where the causing asset has been associated with either primary or secondary elements.

Import Operating Cost Data
✕

Import Source

Data Selection
Data Mapping
Confirmation


🔍

	HEADLINE	START DATE	END DA...	TOTAL CO...	CAUSING ASSET
<input type="checkbox"/>	Tire Failure	6/12/2018		0.00	MRD-AAA-NA-A320-NCZ ~ Tail Number
<input type="checkbox"/>	Bird Strike	11/27/2019		0.00	MRD-AAA-NA-A320-NCZ ~ Tail Number

1 - 2 of 2 Results
← Page 1 of 1 →

Previous
Next

5. Beside each Production Event that you want to import, select the check box, and then select **Next**. The **Data Mapping** section appears.

6. Enter values in the **Cost ID**, **Cost**, **Date**, **Start Date**, and **End Date** boxes, and then select **Next**.
The Date selection in the Data Mapping subsection determines whether repeat events are based on the Start Date or End Date of the source event. The Start Date and End Date fields in the Review Period subsection define the frequency of the repeat events.
 7. Select **Individual Costs** or **Group costs and sum total**, depending on how you want the data to be displayed in the grid, and then select **Finish**.
If **Individual Costs** is selected, each selected action will add a new row to the cost grid. If **Group costs and sum total** is selected, all selected action costs are summed by year number and inserted into grid as one row.
The selected cost data is imported to the Cost Data grid and repeated every review period until the end of the analysis with cost inflation applied.
- Import a Dataset
 1. [Access a Cost Data grid](#).
 2. In the element section to which you want to add cost data, in the **Operating Cost** cell, select , and then select **Import Data**.
The **Import Operating Cost Data** window appears.

Import Operating Cost Data

Import Source Data Selection Data Mapping Confirmation




Select import type:

- Work History
- Strategy Action
- Production Event
- Dataset

Next

3. Depending on the type of source that you want to import, select the **Work History**, **Strategy Action**, **Production Event**, or **Dataset** check box.
4. Select **Browse**.
The **Select a Dataset from the catalog** window appears.

Select a dataset from the catalog

Catalog	Name	^	Caption	Description	Type
<ul style="list-style-type: none"> <   Home Personal Smith, Jane  Dashboards Datasets Graphs Queries R Scripts Reports Searches 					

5. Navigate to and select the data that you want to import.
6. Select **Open**.
The dataset link is automatically populated in the Dataset box.
7. Select **Next**.
Data from the the selected dataset is displayed.

Import Operating Cost Data ✕

Import Source

Data Selection
Data Mapping
Confirmation

🔍

	DATE	1-02A	1-02GO	1-02K	2-04N	3-22B	3-22T	3-2
<input type="checkbox"/>	1/1/2014	4,998.00	12,545.00	13,828.00	5,074.00	483.00	357.00	25
<input type="checkbox"/>	1/2/2014	4,233.00	10,625.00	11,711.00	35,545.00	1,708.00	1,262.00	89
<input type="checkbox"/>	1/3/2014	2,952.00	7,410.00	8,167.00	20,592.00	1,285.00	950.00	67
<input type="checkbox"/>	1/4/2014	8,601.00	21,589.00	23,796.00	20,671.00	409.00	303.00	21
<input type="checkbox"/>	1/5/2014	8,100.00	20,331.00	22,410.00	35,339.00	2,209.00	1,633.00	11

1 - 100 of 365 Results ← Page 1 of 4 →

Previous
Next

8. Select the data that that you want to insert into the Cost Data grid.
9. Select **Next**.
The **Data Mapping** section appears.
10. Enter the Cost ID, Cost, Date, Start Date, and End Date values.
The difference between the Date value in each row and the Start Date entered in step 10 will determine the period number of each row. For example, if year number is 5, then the current cost will be populated in the Year 5 column. The Review Period Start Date must precede the date of the first imported cost. The Review Period End Date must follow the date of the most recent imported cost.
11. Select **Next**.
A list of costs that you are importing appears.
12. Depending on how you want the data to be displayed in the grid, select **Individual Costs** or **Group costs and sum total**.
If **Individual Costs** is selected, each cost will be inserted into the grid as a new row. If **Group costs and sum total** is selected, all costs will be combined and only one new row will be inserted into the grid.
13. Select **Finish**.
The selected cost data is imported to the Cost Data grid and repeated every review period until the end of the analysis with cost inflation applied.

Access Calculated Values

About This Task

Calculated Values are available in the Cost Data grid for each scenario and for each period within each scenario. For information on the formulas used to calculate the values, refer to the Rates and Calculations section.

Note: The values appear as whole numbers in the grid. However, the actual value appears when the cell is selected and is what is stored in the database. If a number is too long to fit in the cell, then scientific notation is used.

Procedure

1. [Access a Cost Data grid.](#)
The **Calculated Values** row appears at the top of the Cost Data grid with values listed in columns including:
 - **Total Cost of Ownership (TCO)**
 - **Net Present Value (NPV)**
 - **Internal Return Rate (IRR)**
 - **Planned Unit Consumption (PUC)**
 - **Equivalent Unit Cost (EUC)**
2. Expand the **Calculated Values** row.
The grid and various sub rows containing calculated values appear.
Sub rows include:
 - **Capital Costs**
Note: Capital Costs sums the capital costs of all elements in the scenario.
 - **Operational Costs**
Note: Operational Costs sums the operating costs of all elements in the scenario.
 - **Total Depreciated Value**
Note: Total Depreciated Value sums the depreciated values for both primary and secondary elements
 - **Revenue**
 - **Cash Flow**
 - **Present Value (PV)**

Add Capital Costs to the Cost Data Grid

About This Task

In LCC, you have the ability to add the value or cost of an asset into the calculation using the **Capital Cost** section of the Cost Data grid. The added capital costs are depreciated according to the method and rate determined in the analysis model. Capital Costs can be added at the Primary and Secondary Element levels.

Initial Values are entered at Year 0 and are not treated as costs or revenue, as they are the value of the element at T0 before the analysis. The total capital cost for an element is the sum of rows underneath it, excluding the initial value row, salvage value row, and depreciated value row.

Capital Costs are added to the depreciated value of the element and the Depreciated Value sum shown in the calculated values for the period. Capital costs and Initial Value are depreciated to the Salvage Value in the period in which the salvage is taken.

Procedure

1. [Access a Cost Data grid.](#)
2. Expand the **Primary Element Name** or **Secondary Element** section.
3. Expand the **Capital Cost** section.

Costs	Total	Year 0	Year 1	Year 2
> Calculated Values				
∨ Model 775 +	2,749,749	0	463,667	431,629
∨ Capital Cost				
Initial Value		7,800,000		
Procurement Cost				
Transportation Cost				
Installation Cost				
Training Cost				
Engineering Cost				

4. Select the cell beside the value that you want to add in the corresponding column.
5. Enter the value.
6. Select any other cell.
Your changes have been saved.

Note: Sums are displayed in the **Sum of Capital Costs** row at the top of the **Capital Cost** section.

Delete Cost Data

Procedure

1. [Access a Cost Data grid.](#)
2. Select the row containing the data that you want to delete, and then, in the upper-right corner of the section, select **Delete**.

A confirmation message appears.

3. Select **Yes**.

The Cost Data has been deleted.

Deployment

Deploy LCC for the First Time

Before You Begin

The following table outlines the steps that you must complete to deploy and configure this module for the first time. These instructions assume that you have completed the steps for deploying the basic system architecture.

These tasks may be completed by multiple people in your organization. GE Digital recommends, however, that the tasks be completed in the order in which they are listed.

If you are deploying this module in APM Now, before you begin completing these tasks, review the system requirements for this module to identify the supported features for this module in APM Now. Unless noted, all deployment tasks in the following table are applicable for the deployment of this module in APM Now.

Results

Step	Task	Notes
1	Assign Security Users to one or more of the Life Cycle Cost Analysis (LCC) Security Groups and Roles .	This step is required.

Upgrade or Update LCC to V4.5.0.0.0

Before You Begin

The following tables outline the steps that you must complete to upgrade this module to V4.5.0.0.0. These instructions assume that you have completed the steps for upgrading the basic GE Digital APM system architecture.

These tasks may be completed by multiple people in your organization. We recommend, however, that the tasks be completed in the order in which they are listed.

Procedure

- Upgrade from any version V4.4.0.0.0 through V4.4.0.0.4
This module will be updated to V4.5.0.0.0 automatically when you update the components in the basic GE Digital APM system architecture. No additional steps are required.
- Upgrade from any version V4.3.0.0.0 through V4.3.1.0.6
This module will be updated to V4.5.0.0.0 automatically when you update the components in the basic GE Digital APM system architecture. No additional steps are required.
- Upgrade from any version V4.2.0.0.0 through V4.2.0.9.4
This module will be updated to V4.5.0.0.0 automatically when you update the components in the basic GE Digital APM system architecture. No additional steps are required.

LCC Security Groups

The following table lists the baseline Security Groups available for users within this module, as well as the baseline Roles to which those Security Groups are assigned.

Important: Assigning a Security User to a Role grants that user the privileges associated with all of the Security Groups that are assigned to that Role. To avoid granting a Security User unintended privileges, before assigning a Security User to a Role, be sure to review all of the privileges associated with the Security Groups assigned to that Role. Also, be aware that additional Roles, as well as Security Groups assigned to existing Roles, can be added via Security Manager.

Security Group	Roles
MI LCC Administrator	MI APM Viewer MI Strategy User MI Strategy Power MI Strategy Admin
MI LCC User	MI Strategy User MI Strategy Power
MI LCC Viewer	MI APM Viewer

The baseline family-level privileges that exist for these Security Groups are summarized in the following table.

Family	LCC Administrator	LCC User	LCC Viewer
Entity Families			
LCC Analysis	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Cost	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Cost Value	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Element	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Operating Profile	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Period	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Resource	View, Update, Insert, Delete	View, Update, Insert, Delete	View
LCC Scenario	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Relationship Families			
Has Associated LCC Element	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Has LCC Member	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Has LCC Cost	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Has LCC Cost Value	View, Update, Insert, Delete	View, Update, Insert, Delete	View

Family	LCC Administrator	LCC User	LCC Viewer
Has LCC Element	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Has LCC Operating Profile	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Has LCC Period	View, Update, Insert, Delete	View, Update, Insert, Delete	View
Has LCC Scenario	View, Update, Insert, Delete	View, Update, Insert, Delete	View

Reference

General Reference

LCC Site Filtering

A Life Cycle Cost Analysis is assigned a site and spread to all the related records, such as Analysis records and Cost records. In LCC, users will see only LCC Analyses that are assigned to their site(s) or that are global records.

Tip: For more information, refer to the Site Filtering section of the documentation.

When a user with multiple sites creates an LCC Analysis, the user will have the option of selecting one of the sites or selecting Global.

When a user makes an asset selection, the list of assets is limited to assets that have the same site as the analysis.

Resources are all viewable by any user and can be used in any analysis.

Example

Consider an organization that has three sites, Site X, Site Y, and Site Z. The following LCC Analysis records exist:

- LCC Analysis A: Assigned to Site X
- LCC Analysis B: Assigned to Site Y
- LCC Analysis C: Assigned to Site Z
- LCC Analysis D: No site assigned (global record)

Scenario 1: User assigned to only Site X

This user will see LCC Analyses A and D.

Scenario 2: User assigned to both Site X and Site Y

This user will see LCC Analyses A, B, and D.


Scenario 3: Super User

This user will see LCC Analyses A, B, C, and D.

Important: If a multi-site user or a Super User links child records from multiple sites to a parent record designated as a global record, then another user who does not have access to all sites may only see a portion of the data associated with that record. In the example above, if a child record assigned to Site X and a child record assigned to Site Y are linked to LCC Analysis D, the Site X user will not be able to see all the records associated with LCC Analysis D.

LCC Data Model

The following diagram shows how the families used in LCC are related to one another.

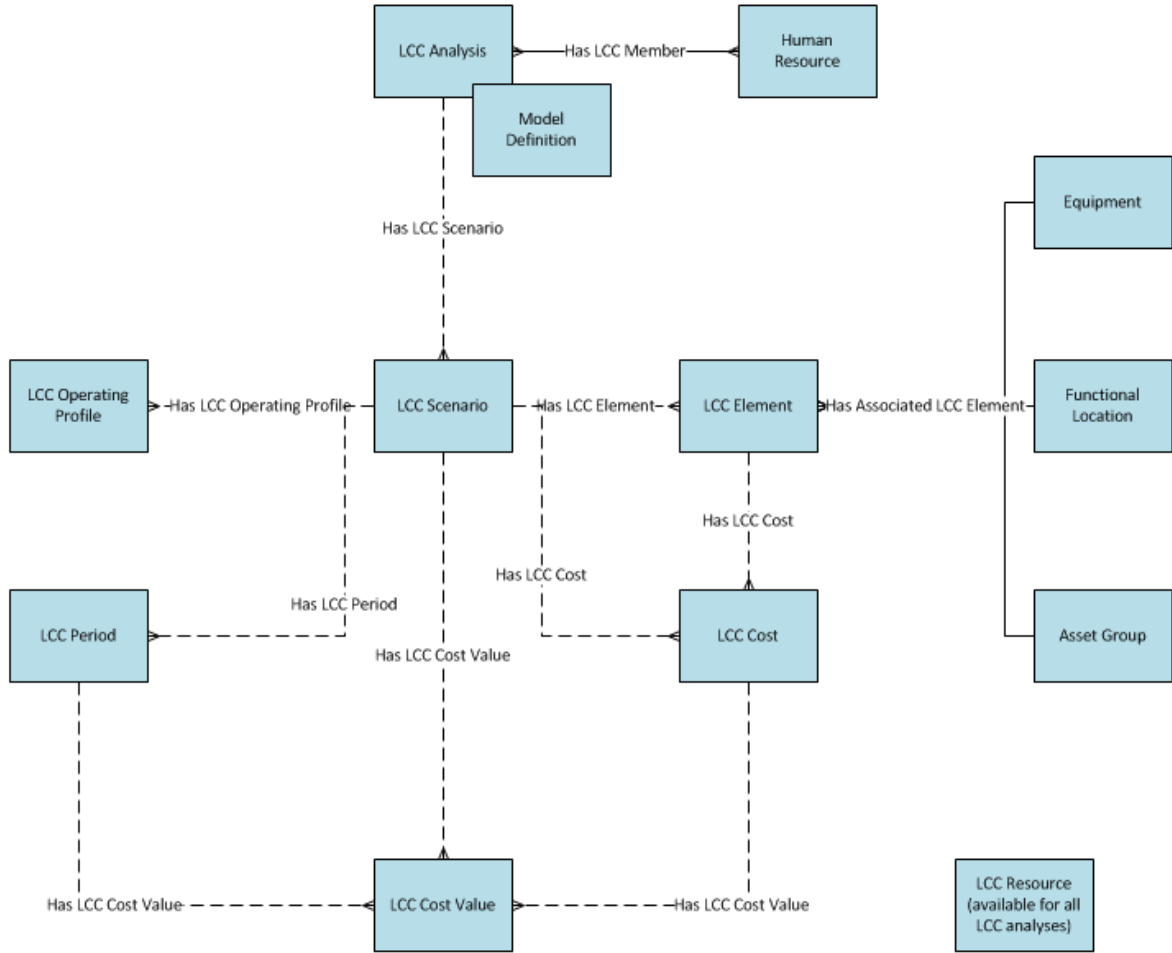 

Note: In the diagram, boxes represent entity families and lines represent relationship families that are configured in the baseline database. You can determine the direction of the each relationship definition from the direction of the arrowhead: the box from which the arrow originates is the predecessor, and the box to which the arrow head points is the successor.

LCC URLs

There is one URL route associated with Life Cycle Cost Analysis: LCC. The following table describes the various paths that build on the route, and the elements that you can specify for each.

Tip: For more information, refer to the URLs section of the documentation.

Element	Description	Accepted Value(s)	Notes
lcc/dashboard/0: Displays the LCC Dashboard (no asset context).			
lcc/dashboard/0/<AssetKey>: Displays the LCC Dashboard with an asset context.			
AssetKey	Entity key of the selected asset	None	N/A
lcc/shell/0/summary: Displays the Definition of a new LCC Analysis. Used to create a new LCC Analysis.			

Element	Description	Accepted Value(s)	Notes
lcc/shell/<AnalysisKey>/summary: Displays the Overview and Definition of an existing LCC Analysis. Used to open an existing LCC Analysis.			
AnalysisKey	Entity key of a LCC Analysis record	None	N/A
lcc/shell/<AnalysisKey>/scenario/0/definition: Displays the Scenario Definition for a new scenario in an existing LCC Analysis. Used to add a new scenario to an existing LCC Analysis			
AnalysisKey	Entity key of a LCC Analysis record	None	N/A
lcc/shell/<AnalysisKey>/scenario/<ScenarioKey>/definition: Displays the Scenario Definition for an existing scenario in an existing LCC Analysis. Used to open an existing scenario in an existing LCC Analysis and show Scenario Definition.			
AnalysisKey	Entity key of a LCC Analysis record	None	N/A
ScenarioKey	Entity key of a LCC Scenario record	None	N/A
lcc/shell/<AnalysisKey>/scenario/<ScenarioKey>/grid: Displays the Cost Data for an existing scenario in an existing LCC Analysis. Used to open an existing scenario in an existing LCC Analysis and show Cost Data.			
AnalysisKey	Entity key of a LCC Analysis record	None	N/A
ScenarioKey	Entity key of a LCC Scenario record	None	N/A

Example URLs

Example URL	Destination
lcc/dashboard/0	LCC Overview page
lcc/dashboard/0/1234567	LCC Overview page in the context of an asset with the Entity Key 1234567
lcc/shell/0/summary	LCC Analysis Definition page to create a new LCC Analysis
lcc/shell/1234567/summary	LCC Analysis Overview page and LCC Definition page of an existing LCC Analysis with the Entity Key 1234567
lcc/shell/1234567/scenario/0/definition	Scenario Definition page to add a new scenario to an existing LCC Analysis with the Entity Key 1234567
lcc/shell/1234567/scenario/7654321/definition	Scenario Definition page of an existing scenario with the Entity Key 7654321 in an existing LCC Analysis with the Entity Key 1234567
lcc/shell/1234567/scenario/7654321/grid	Cost Data page of an existing scenario with Entity Key 7654321 in an existing LCC Analysis with the Entity Key 1234567

LCC System Code Tables

The following table lists the System Code Tables that are used by LCC:

Table ID	Table Description	Function
MI_LCC_CAL_VAL_TYPE	Calculated Value Type	Populates the cost name for costs that are a subcategory of Calculated Values.
MI_LCC_COST_TYPE	Cost Type	Populates the cost name for costs that are a subcategory of the primary or secondary element.
MI_LCC_DEPRECIATION_METHOD	Depreciation Method	Populates the Depreciation Method field in LCC Analysis records.
MI_LCC_FIXED_COST_TYPE	Capital Cost Type	Populates the name for costs in the Capital Cost subcategory.
MI_LCC_INTEREST_RATE_TYPE	Interest Rate Type	Populates the Interest Rate Type field in LCC Analysis records.
MI_LCC_PERIOD_UNITS	Period Units	Populates the Period Unit field in LCC Analysis records.
MI_LCC_PROFILE_UNITS	Profile Rate Units	Populates the Measurement Frequency field in LCC Scenario records.
MI_LCC_RESOURCE_CATEGORY	Resource Category	Populates the Type field in LCC Resource records.
MI_LCC_TEAM_MEMBER_TYPE	LCC Team Member Type	Populates the Type field for LCC Team Members.

Family Field Descriptions

Analysis Records

Analysis records store information about the fields in the Analysis family that are used to populate the fields for the Analysis Definition. This topic provides an alphabetical list and description of the fields that exist for the Analysis family and appear on the LCC Analysis datasheet. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Analysis Period Unit	Character	The time for unit period.	The default value for this field is years. This field is required.
Annual Effective Interest Rate	Numeric	The annualized compounding interest rate.	This value must be a positive number. This field is required.

Field	Data Type	Description	Behavior and Usage
Annual Escalation Rate	Numeric	The current price or value minus the initial cost or value in a one year period, divided by the initial price.	This value must be a positive number. This field is required.
Annual Nominal Interest Rate	Numeric	The stated interest rate of a given loan.	This value must be a positive number. This field is required.
Assumptions	Text	User entered field describing any/all relevant Assumptions.	Text is entered in the Assumptions field.
Constraints	Text	User entered field describing any/all Constraints.	Text is entered in the Constraints field.
Currency	Character	The currency used by your organization.	The default value for this field is US Dollars.
Declining Balance Factor	Numeric	The factor that determines accelerated depreciation in which the amount of depreciation that is charged to an asset declines over time.	The default value for this field is 2, which represents double declining balance depreciation. The value in this field must be a positive number.
Dependencies	Text	User entered field that described any/all dependencies.	Text is entered in the Dependencies field.
Depreciation Method	Character	The method used to determine depreciation of the asset over time.	The value in this field can be: <ul style="list-style-type: none"> • Straight Line • Declining Balance • Sum of Year's digits This field is required.
Description	Text	User entered field that described any/all descriptions.	Text is entered in the Description field.
End Date	Date	The date on which the analysis ended.	This field is calculated by adding the analysis period to the start date. This field is required.
Interest Rate Type	Character	The type of interest rate, either Simple or Compound , used for the analysis.	This field is required.
Is Fleet Management	Boolean	Identifies whether or not the analysis is used for fleet management.	This field is calculated by your selection when creating a new analysis.
Name	Character	The name of the analysis.	This field is required.
Number of Periods	Numeric	The number of periods (e.g. years) which the analysis covers.	This field is required.

Field	Data Type	Description	Behavior and Usage
Objectives	Text	The objectives for the analysis as defined by your organization.	Text is entered in the Objectives field.
Start Date	Date	The date on which the analysis began.	You can use the Calendar feature to select the date on which the analysis began. This field is required.
Tax Rate	Numeric	The tax rate associated with the analysis.	This value must be a positive number. This field is required.

Cost Records

Cost records store information about the cost data used in LCC. This topic provides an alphabetical list and description of the fields that exist for the Cost family and appear on the LCC Cost datasheet. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Cost Name	Character	The name of the cost.	Text is entered in the Cost Name field.
Cost Type	Character	Determines the type of cost for the record.	The value in this field can be: <ul style="list-style-type: none"> • Capital • Operating • Calculated
Element Key	Numeric	The Entity Key of the element record.	System Generated field that is hidden by default.
Is Primary	Logical	Indicates whether or not the cost is for the primary element.	This field is required.
Resource Name	Character	The name of the resource.	Text is entered in the Resource Name field to describe the resource.
Scenario Key	Numeric	The Entity Key of the scenario record.	System Generated field that is hidden by default.
Total	Numeric	The total of costs of the cost record.	This field is the sum of the costs of all periods associated with this cost.

Cost Value Records

Cost Value records store information about costs. This topic provides an alphabetical list and description of the fields that exist for the Cost Value family. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Cost	Numeric	The cost associated with the record.	A numeric value is entered in the Cost field.
Cost Key	Numeric	The Entity Key of the cost record.	System Generated field that is hidden by default.
Period Key	Numeric	The Entity Key of the period record.	System Generated field that is hidden by default.
Scenario Key	Numeric	The Entity Key of the scenario record.	System Generated field that is hidden by default.

Element Records

Element records store information about the elements used in scenarios. This topic provides an alphabetical list and description of the fields that exist for the Element family. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Is Primary?	Logical	Indicates whether or not the associated record is the "Primary" Scenario element.	This field is required.
Name	Character	The name of the element record.	This field is required.
Planned Life End	Numeric	The amount of units at the end of operation. This field is only available for Fleet Management analyses.	This field is required.
Planned Life Start	Numeric	The amount of units at the beginning of operation. This field is only available for Fleet Management analyses.	This field is required.

Field	Data Type	Description	Behavior and Usage
Quantity	Numeric	The quantity of the element record.	This field is required.
Scenario Key	Numeric	The Entity Key associated with the scenario record.	System Generated field that is hidden by default.

Operating Profile Records

Operating Profile records store information about the fields in the Operating Profile. This topic provides an alphabetical list and description of the fields that exist for the Operating Profile family. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
From	Date	The start date for which the profile is applicable.	This field is required.
Name	Character	The name of the profile.	This field is required.
Operating Rate in Percentage	Numeric	The rate of the profile.	This field is required.
Repeat Annually	Logical	Indicates whether or not the operating profile repeats annually.	This field is required.
Scenario Key	Numeric	The Entity Key of the scenario record.	System Generated field that is hidden by default.
To	Date	The end date for which the profile is applicable.	This field is required.

Period Records

Period records store information about the periods in scenarios. This topic provides an alphabetical list and description of the fields that exist for the Period family. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Name	Character	The value used to identify the period.	This field is required.
Scenario Key	Numeric	The Entity Key of the scenario record.	System Generated field that is hidden by default.
Sequence	Numeric	A number indicating the order of the period.	This value begins with 0. This field is required.

Resource Records

Resource records store information about the resources used in scenarios. This topic provides an alphabetical list and description of the fields that exist for the Resource family. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Description	Text	The details of the resource.	Text entered in the Description field to describe the resource.
Name	Character	The value used to identify the resource.	This field is required.
Type	Character	The selection of the type of resource.	The Type must be one of the following values: <ul style="list-style-type: none"> • Labor • Part This field is required.
Unit	Character	The selection of the resource unit.	The Unit field is entered. This field is required.
Unit Cost	Numeric	The cost of the unit resource.	This field is required.

Scenario Records

Scenario records are used to determine values in a scenario and store information about the fields in a scenario. This topic provides an alphabetical list and description of the fields that exist for the Scenario family. The information in the table reflects the baseline state and behavior of these fields.

This family is enabled for site filtering, which means that records in this family can be assigned to a specific site, and will only be accessible to users who are assigned to the same site and have the appropriate license and family privileges. For more information, refer to the Sites section of the documentation.

Field	Data Type	Description	Behavior and Usage
Analysis Key	Numeric	The numeric key associated with the Analysis.	System Generated field that is hidden by default.
Description	Text	The details of the scenario.	Text entered in the Description field to describe a scenario.
Internal Rate of Return (IRR)	Numeric	The discount rate used to make the net present value equal 0.	This field is automatically populated.
Is Template	Logical	Identifies whether or not a scenario has been saved as a template.	This field is required.
Measurement Frequency	Character	A value describing the unit of rate capacity. This value is used in conjunction with Monetary Value and Unit of Measure.	The Rate of Measure must be one of the following: <ul style="list-style-type: none"> • Per Year • Per Quarter • Per Month • Per Week • Per Day • Per Hour This field is required.
Measurement Unit	Character	A value that defines the unit of measure (e.g. gallons, miles, pounds) that is applicable in the Operating Profile.	This value is used in conjunction with Monetary Value and Rate of Measure This field is required.
Name	Character	The value used to identify the scenario.	This field is required.
Net Present Value(NPV)	Numeric	The sum of the present values of incoming and outgoing cash flows over an analysis period.	This field is not required.
Rate Capacity	Numeric	A value describing the maximum rate of measurement (e.g. 5000 gallons/Year).	This field is required.
Total Capital Cost	Numeric	The sum of all Capital Costs in a scenario.	This field is automatically populated. This field is required.
Total Cost of Ownership	Numeric	The sum of all costs required for the ownership of an asset in a scenario.	This field is automatically populated. This field is not required.

Field	Data Type	Description	Behavior and Usage
Total Operational Cost	Numeric	The sum of all costs needed for asset operations in a scenario.	This field is automatically populated. This field is required.
Value of Unit	Numeric	A monetary value per unit measurement (e.g. \$1000/gallon).	This value is used in conjunction with Rate of Measure and Unit of Measure. This field is required.

Catalog Items

Analyses Folder

The Catalog folder \\Public\Meridium\Modules\LCC\Analyses contains individual cost data queries for each analysis created in a database.

Dashboards Folder

The Catalog folder \\Public\Meridium\Modules\LCC\Dashboards contains the following items.

Item Name	Behavior and Usage
LCC Dashboard	A dashboard featuring information related to Life Cycle Cost Analysis.

Graphs Folder

The Catalog folder \\Public\Meridium\Modules\LCC\Graphs contains the following items.

Graph Name	Behavior and Usage
Life Cycle Performance - Highest IRR Scenario for Each Analysis	Graph for the LCC Overview dashboard. This graph shows the Total Cost of Ownership, Net Present Value, and Internal Rate of Return of the top 10 LCC Scenarios with the highest NPV of all LCC Scenarios with the highest IRR within a LCC Analysis.
Life Cycle Performance - Highest NPV Scenarios	Graph for the LCC Overview dashboard. This graph shows the NPV of the top 10 LCC Scenarios with the highest NPV of all LCC Scenarios.

Queries Folder

The Catalog folder \\Public\Meridium\Modules\LCC\Queries contains the following items.

Query Name	Behavior and Usage
AnalysisTileQuery	Returns a list of LCC Analyses. This query is used to generate the list of LCC Analyses that is displayed on the LCC Overview page.
Capital Cost Breakdown vs Sequence Name	Used to generate the Capital Cost Breakdown chart on the LCC Overview page.
Capital Cost vs Sequence name	Used to generate the Capital Cost chart on the LCC Overview page.
Cash Flow vs Sequence name	Used to generate the Cash Flow chart on the LCC Overview page.
Cost Data Query	Used to collect all of the data in the cost data grid.
Depreciated Values vs Sequence Name	Used to generate the Depreciated Value chart on the LCC Overview page.
Example - Labor Cost by Year and Name	Sample query that returns the labor cost by year and resource name for a selected analysis and scenario.
Example - Resource Cost by Year and Name	Sample query that returns the resource cost by year and resource name for the selected analysis and scenario.
Example - Total Costs by Year	Sample query that returns the total cost by year and resource name for the selected analysis and scenario.
Get Cost Details for Scenario	Returns all LCC Cost records in a LCC Scenario. The GE Digital APM system uses this query when copying an LCC Scenario.
Get Cost Value Details from Scenario	Returns all LCC Cost Value records in a LCC Scenario. The GE Digital APM system uses this query when copying LCC Scenario.
Get Element Details for Scenario	Returns all LCC Element records in a LCC Scenario. The GE Digital APM system uses this query when copying an LCC Scenario.
Get Period Details for Scenario	Returns all LCC Period records in a LCC Scenario. The GE Digital APM system uses this query when copying an LCC Scenario.
IRR Query	Returns the Total Cost of Ownership, NPV, and IRR of the top 10 LCC Scenarios with highest NPV of all LCC Scenarios with highest IRR within an LCC Analysis. This query is used to generate data for the Life Cycle Performance - Highest IRR Scenario for Each Analysis section on the LCC Dashboard.
IRR Query dependency	Returns the Total Cost of Ownership, NPV, and IRR of all LCC Scenarios with highest IRR among those within an LCC Analysis. This query is used as a sub-query of the IRR Query query.
LCC Dashboard Graph Query - NPV with ACC and NA	Returns the NPV of the top 10 LCC Scenarios with highest NPV of all LCC Scenarios.
LCC Page Filter	This query is used to generate the page filter on the LCC Overview page.

Query Name	Behavior and Usage
LCC Resource List Query	Returns a list of LCC Resources. This query is used to generate the list of LCC Resources on the LCC Overview page.
Operating Cost Breakdown vs Sequence Name stacked	Operating Cost Breakdown chart in LCC Overview page.
Operating Cost vs Sequence Name	Used to generate the Operating Cost chart on the LCC Overview page.
Present Value Vs Sequence Name	Used to generate the Present Value chart on the LCC Overview page.

Rates and Calculations

Interest Rate Definitions

There are several types of interest rates used in LCC Analyses.

The differences among the various types of rates are based on several key economic factors.

Annual Nominal Interest Rates

The annual nominal interest rate is the stated interest rate of a given loan. It is the actual monetary price that borrowers pay to lenders to use their money. If the nominal rate on a loan is 5%, then borrowers can expect to pay \$5 of interest for every \$100 loaned to them for one year.

Simple Interest Rates

Simple interest rate is the easiest to calculate as there is no compounding taking place over each year. So, a 5% simple annual interest rate adds 5 percent to the capital sum owed for each year.

Simple Interest Rates

If you put a sum of money in the bank and spend the interest earned each year (i.e., the capital stays constant), the amount of money that you will have earned some time in the future is given by the formula:

$$A=P(1+r)*t$$

where P is the initial investment (Principal), r is the interest rate per period expressed as a decimal fraction, t is the number of periods, and A is the amount of money in the bank plus the interest you spend at the end of the calculated period.

Compounded Interest Rates

In compounded interest rates, the rate of annual interest is applied to the principle sum borrowed, plus the additional amount owed in the previous year due to the interest already applied.

Compounded Interest Rates

If you put a sum of money in the bank and let the interest accumulate, the amount of money that you will have some time in the future is given by the formula:

$$A=P(1+r)^t$$

where P is the initial investment, r is the interest rate per period, t is the number of periods, and A is the amount of money in the bank after the periods.

Real Interest Rates

The real interest rate states the “real” rate that the lender receives after inflation is factored in; that is, the interest rate that exceeds the inflation rate. If a bond that compounds annually has a 6% nominal yield and the inflation rate is 4%, then the real rate of interest is only 2%.

The real rate of interest could be said to be the actual mathematical rate at which investors and lenders are profiting from their loans. It is actually possible for real interest rates to be negative if the inflation rate exceeds the nominal rate of an investment. For example, a bond with a 3% nominal rate will have a real interest rate of -1% if the inflation rate is 4%. A comparison of real and nominal interest rates can therefore be summed up in this equation:

Real interest rate = Nominal interest rate - Inflation

Several economic stipulations can be derived from this formula that lenders, borrowers and investors can use to make more informed financial decisions.

Real interest rates can not only be positive or negative, but can also be higher or lower than nominal rates. Nominal interest rates will exceed real rates when the inflation rate is a positive number (as it usually is). But, real rates can also exceed nominal rates during deflation periods.

Annual Effective Interest Rates

The effective rate takes the power of compounding into account for Nominal Interest Rate. For example, if a bond pays 6% on an annual basis and compounds semiannually, then an investor who invests \$1,000 in this bond will receive \$30 of interest after the first 6 months ($\$1,000 \times .03$), and \$30.90 of interest after the next 6 months ($\$1,030 \times .03$). The investor received a total of \$60.90 for the year, which means that while the nominal rate was 6%, the effective rate was 6.09%.

Mathematically speaking, the difference between the nominal and effective rates increases with the number of compounding periods within a specific time period.

Depreciation Methods

Depreciation Methods include:

Declining Balance

Declining balance method of depreciation is a technique of accelerated depreciation in which the amount of depreciation that is charged to an asset declines over time. In other words, more depreciation is charged during the beginning of the lifetime and less is charged during the end.

The reason for a declining amount of depreciation charged is that assets are usually more productive when they are new and their productivity declines gradually. Thus, in the early years of their operation, assets generate more revenue as compared to the revenue generated in later years of their life.

Formula and Calculation Procedure

Declining balance depreciation is calculated using the following formula:

Depreciation = Depreciation Rate \times Book Value of Asset

Depreciation rate is given by the following formula:

Depreciation Rate = Accelerator \times Straight Line Rate

In the above formula, accelerator is a multiplication factor, which accelerates depreciation. Book value is the difference between cost of an asset and its accumulated depreciation. During the first accounting period, accumulated depreciation is zero, so book value is equal to cost. Since the book value decreases after each depreciation charge, depreciation expense declines in successive charges.

Depreciation is charged according to the above method as long as book value is greater than the salvage value of the asset. No more depreciation is provided when book value equals salvage value.

Single Line

Single line (or Straight line) depreciation is the default method used to gradually reduce the carrying amount of a fixed asset over its useful life. The method is designed to reflect the consumption pattern of the underlying asset, and is used when there is no particular pattern to the manner in which the asset is to be used over time.

1. Under the straight-line method of depreciation, depreciation occurs evenly over the estimated useful life of an asset. The straight-line calculation steps are:
2. Determine the initial cost of the asset that has been recognized as a fixed asset.
3. Subtract the estimated salvage value of the asset from the amount at which it is recorded on the books.
4. Determine the estimated useful life of the asset. It is easiest to use a standard useful life for each class of assets.
5. Divide the estimated useful life (in years) into 1 to arrive at the straight-line depreciation rate.
6. Multiply the depreciation rate by the asset cost (less salvage value).

Single Line

Pensive Corporation purchases the Procrastinator Deluxe machine for \$60,000. It has an estimated salvage value of \$10,000 and a useful life of five years. Pensive calculates the annual straight-line depreciation for the machine as:

- Purchase cost of \$60,000 – estimated salvage value of \$10,000 = Depreciable asset cost of \$50,000
- 1 / 5-year useful life = 20% depreciation rate per year
- 20% depreciation rate x \$50,000 depreciable asset cost = \$10,000 annual depreciation

Sum of Years

The sum-of-years digits depreciation method is an accelerated method of depreciation that calculates depreciation using the following equation:

$$SYD = \frac{(cost - salvage) * (life - per + 1) * 2}{life * (life + 1)}$$

where,

cost = initial cost of the asset (at start of period 1)

salvage = final value of the asset at the end of its lifetime

life = number of periods over which the depreciation occurs

per = the period for which the depreciation is being calculated

Straight Line

Straight line is the sum of capital costs and number of periods.

Annual (Straight Line) Depreciation Rate $DSL = (V-S)/(V*L)$

Annual Discount Rate

The annual discount rate is the rate of return used in a discounted cash flow analysis to determine the present value of future cash flows.

Details

In an annual discounted cash flow analysis, the sum of all future cash flows (C) over some holding period (N), is discounted back to the present using a rate of return (r). This rate of return (r) in the below formula is the discount rate.

$$NPV = \sum_{n=0}^N \frac{C_n}{(1+r)^n}$$

Net Present Value

The net present value (NPV) or net present worth (NPW)[1] is defined as the sum of the present values (PVs) of incoming and outgoing cash flows over a period of time. Incoming and outgoing cash flows can also be described as benefit and cost cash flows, respectively.

$$NPV = \sum_{n=0}^N \frac{C_n}{(1+r)^n}$$

Present Value

Present value is the current value of future cash flows base on the Discount Rate. For LCC, the Discount Rate is calculated from Nominal Interest Rate to give the time value of money being applied.

(Cash Flow / (1+Discount Rate))

Costs

Costs include:

Capital Costs

Capital costs are costs, typically recurring, which are set in advance and do not vary. Examples include storage overheads amortized over the total number of assets, documentation, etc.

Cash Flow

Cash flow represents the after tax influx of money, which can be positive if savings are considered.

$(\text{Revenue} - (\text{All Costs} + \text{Depreciation})) * (1 - \text{Tax Rate}) + \text{Depreciation}$

Operational Costs

Operational costs are the sum of operation costs for a period and includes all variable costs related to operating the equipment (e.g., fuel and maintenance).

Revenue

Revenue is calculated from the Profile.

Total Cost of Ownership

Total Cost of Ownership represents the sum of all cash flows after tax cost over the life cycle of the asset.

Annual Escalation Rate

Annual Escalation Rate = current cost or value minus the initial price or value and divide by the initial price in a one year period.

$ER = (C2 - C1) / C1$, where C1 is initial cost and C2 is the end value after 1 year

Internal Rate of Return

Internal Rate of Return represents the interest rate required to bring the Net Present Value (NPV) to zero, and gives the anticipated return rate from investment in the asset (Total Cost of Ownership).

$TCO / (1 + \text{Discount Rate})$

Planned Unit Consumption

Planned Unit Consumption is the sum of all operating units accumulated over each period in an analysis.

For example, a Planned Unit Consumption value may be calculated as [Rate x duration Period 1] + [Rate x duration Period 2]. Periods can be whole periods defined for the analysis, or partial periods defined by date in the Operating Profile for a specific element.

Equivalent Unit Cost

Equivalent Unit Cost is the present value of the average cost per operating unit.

For Example, an Equivalent Unit Cost value may be calculated as $NPV / \text{Planned Unit Consumption}$.