

Asset Performance Management APM Classic V4.6.11.0.0



#### Contents

Chapter 1: Overview	1
Overview of the Maps Module	2
Access the Maps Page	2
Map Query Workflow	2
Chapter 2: Workflow	4
Core Analysis: Geospatial Analysis	5
Start	5
Design a Query	6
Open the Query in Maps	6
Review Query Results	6
Opportunity Exists?	6
Manage Performance Recommendations	6
Chapter 3: Baseline Maps Query	7
About the Baseline Maps Query	8
Modify a Map Query	13
Chapter 4: Admin	15
About GIS Configuration	16
Access the GIS Configuration Page	16
Configure the Map Tile Server	16
Chapter 5: Data Loader	17
- About the Geographic Information System (GIS) Data Loader	18
About the GIS Data Loader Requirements	18
About the GIS Data Loader Data Model	18
About the GIS Data Loader General Loading Strategy	19
About the GIS Data Loader Workbook Layout and Use	20
About the GIS Data Loader Load Verification	20

#### **Copyright Digital, part of GE Vernova**

© 2025 GE Vernova and/or its affiliates. All rights reserved.

GE, the GE Monogram, and Predix are trademarks of General Electric Company used under trademark license.

This document may contain Confidential/Proprietary information of GE Vernova and/or its affiliates. Distribution or reproduction is prohibited without permission.

THIS DOCUMENT AND ITS CONTENTS ARE PROVIDED "AS IS," WITH NO REPRESENTATION OR WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF DESIGN, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE. ALL OTHER LIABILITY ARISING FROM RELIANCE UPON ANY INFORMATION CONTAINED HEREIN IS EXPRESSLY DISCLAIMED.

Access to and use of the software described in this document is conditioned on acceptance of the End User License Agreement and compliance with its terms.

#### Overview

- Overview of the Maps Module
- Access the Maps Page
- Map Query Workflow

#### **Overview of the Maps Module**

The Maps module uses SQL queries to construct dynamic maps that make data more tangible and easier to interpret.

#### Access the Maps Page

#### Procedure

1. In the module navigation menu, select **Tools** > **Maps**.

The **Maps** page appears.

Maps				Browse Create New
ôô VIEW MAP	SOURCE QUERY	CAPTION	CREATOR	DATE
Baseline Map Query	Public\Meridium\Modules\Core\Queries\Map Queries\Baseline Map Query	Baseline Map Query	Administrator, Meridium	Wednesday, September 18, 2019 9:31 PM

The Maps page contains the following items:

- **Browse**: This allows you to select a preexisting query from the catalog.
- Create New: This allows you to create a query using the Design or SQL workspace.
- 😚: This allows you to search preexisting queries.
- **View Map**: This grid column contains the names of the existing Map queries. Select the name of the query whose visual map you want to view.
- **Source Query**: This grid column contains the filepaths of each stored query. Select a hyperlink to access the **Results** workspace for that query.
- 2. On the **Maps** page, select **Browse**. The **Select a query from the catalog** window appears.
- 3. Navigate to \\Public\Meridium\Modules\Core\Queries\Map Queries. The Map queries appear.
- Select the Baseline Map Query, and then select Open. On a new page, the Baseline Map Query map appears. You can now modify the Baseline Map Query as needed.

#### **Map Query Workflow**

This workflow provides the basic, high-level steps for using this module. The steps and links in this workflow do not reference every possible procedure. For more procedures, see the links in the Related Information section.

1. Use the GIS Data Loader to load your geospatial data into APM

#### 2. Modify the Baseline Map Query

The baseline Map query is highly customizable, and more complex queries can be created using the following additional steps:

- 1. Create an Expression
- 2. Create a Prompt with a List of Query Results
- 3. Create a Hyperlink

You can also use the following type of SQL query to further customize your map and the data displayed on it.

• About Select Queries


#### Workflow

- Core Analysis: Geospatial Analysis
- Start
- Design a Query
- Open the Query in Maps
- Review Query Results
- Opportunity Exists?
- Manage Performance Recommendations

#### **Core Analysis: Geospatial Analysis**

Geospatial Analyses (Maps) leverage APM data to identify opportunities for business improvement. When the process identifies such an opportunity, a Performance Recommendation is raised to communicate the need and track the required work. You can use the Maps Workflow process to identify opportunities or needs for improvement based on generated queries that identify bad actors or high-impact failures.

In the following workflow diagram, the blue text in a shape indicates that a corresponding description has been provided in the sections that follow the diagram. For more information, refer to the topic Interpreting the Workflow Diagrams.

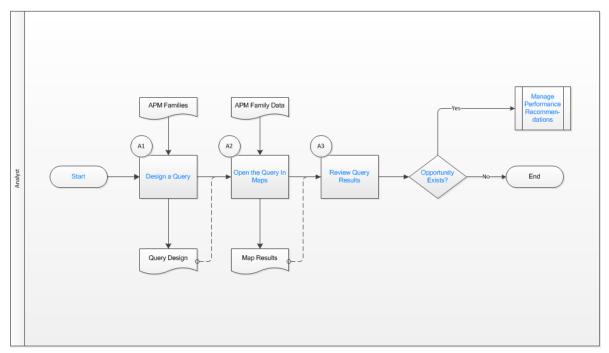

- 1. Start on page 5
- 2. Design a Query on page 6
- 3. Open the Query in Maps on page 6
- 4. Review Query Results on page 6
- 5. Opportunity Exists? on page 6
- 6. Manage Performance Recommendations on page 6

#### Start

#### Persona: Analyst

To satisfy a specific business problem, a APM User initiates a map analysis that applies standard data analysis techniques.

#### **Design a Query**

#### Persona: Analyst

To satisfy a specific business need, design a map query to select specific data from APM entities. Multiple entities can be included in the map query design to extract related records.

#### **Open the Query in Maps**

#### Persona: Analyst

Execute the map query to produce results, and open the resulting map. The user can modify the map query design to achieve the desired result.

#### **Review Query Results**

Persona: Analyst

Analyze the map query results. The map query can be designed to identify bad actors or high impact failures for further analysis. In the analysis of query records, consult other forms of APM data.

#### **Opportunity Exists?**

Persona: Analyst

If a APM User identifies an opportunity or need for improvement, then a Performance Recommendation is raised to communicate the need and track the required work. Otherwise, the workflow ends.

#### **Manage Performance Recommendations**

#### Persona: Analyst

If a APM User identifies an opportunity or need for improvement, then a Performance Recommendation is raised to communicate the need and track the required work.

Go to the Manage Performance Recommendations workflow.

#### **Baseline Maps Query**

- About the Baseline Maps
   Query
- Modify a Map Query

#### **About the Baseline Maps Query**

The Maps module helps provide a visual companion to illustrate your data in a way that is dynamic and easy to understand.

The Maps module is built using the same SQL queries used throughout APM to allow maximum flexibility.

The Baseline Map Query is located in the Catalog under \\Public\Meridium\Modules \Core\Queries\Map Queries.

Column	Parameter	Description	
1	Unique ID	The first column has a unique identifier for the information included in the Maps query. Typically, it is an Entity Key for a specific piece of data.	
2	Functional Location	This column contains the functional location of the objects being mapped.	
3	Region	This column contains the geospatial data for the value being mapped.	
4	Color	This column contains the color value for the data that is being mapped. You can use either hex or RBG values.	
5	Marker	<ul> <li>This column contains the value for the geospatial marker. This field is not case sensitive, and it can be any of several shapes, including:</li> <li>dot</li> <li>circle</li> <li>square</li> <li>diamond</li> <li>triangle</li> <li>alphabetic character</li> <li>alphanumeric character</li> </ul>	

The Baseline Map Query comes with five fixed columns:

Beyond the five baseline columns, there is no limit to the number of additional columns that can be added to the query.

Beyond the five baseline columns, any additional columns of information queried will appear on the visual map, on an inset window, when an entity is selected.

If a hyperlink is included on any additional columns beyond the five baseline columns, it will appear on the visual map, on an inset window, when an asset or location is selected.

Queries are highly flexible and incredibly customizable. For more information about how to use queries in APM, refer to the Query section of the documentation.

Note:

• Maps will only load data sets with five hundred points or fewer on mobile devices.

 Maps are not updated automatically when you return to the previously opened tab. Select the Refresh icon ( C) to update the map.


# <text>

Six additional columns have been added to the five baseline columns, to create the following additions:

- The marker color indicates the Criticality level of the asset.
- The shape of the marker is determined by the Equipment Vendor.
- A hyperlink is added to the **Location** column that links to the asset in Record Manager.
- A hyperlink is added to the **Equipment** column that points to the asset in Asset Health Manager.

Interacting with the Map: Record Explorer

Supposed you were to select an asset on the Map, as shown in the following image:

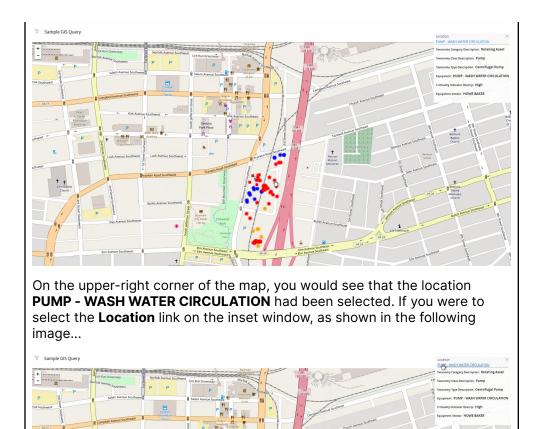



...then, on a new page, the datasheet for the Functional Location would appear.

Macaeos

Record Explorer	Datasheet ID: Functional Location	0	Site: Roanoke, VA
MRD-ROACULATION Functional Location	Functional Location Identification	1	<u>i</u>
4 Related Families 🛛 🗸			
Asset Strategy (1)	Functional Location	Value(s)	Description
Functional Location (1)		MRD-ROA-REFN-RF037-G0035-03	PUMP-WASH WATER CIRCULATIOI
RCM FMEA Asset (1)	Functional Location Long Description	PUMP-WASH WATER CIRCULATION	
RCM FMEA Recommendation (6)			
	Unique ID	Text input	
	System Status	Text input	
	SAP Class	Text input	Text input
	Superior Function Location	MRD-ROA-REFN-RF037	
	Business Area	1061	Meridium Roanoke Refining Unit R
	Catalog Profile	0005	Functional Location
	Category	R	ROTATING EQUIPMENT
	CO Area	9100	Meridium Roanoke Production
	Company Code	0100	Meridium Roanoke
as normal. Interacting with the As in the previous e Map.			an asset on the
Sample GIS Query	Provide Section Contraction (Contraction) Provide Section (Cont	P to compare and an an an and an	California CRCLADDA PADR WORKWART CRCLADDA Instancy Category Bucington, Retarting Assat Instancy Category Bucington, Retarting Assat Instancy Opt Sectory Category Assat Requests Version, Category Assat Requests Version, Retart Requests Version, Retart Requests Version, ROYE BADES

This time, if you were to select the **Equipment** link on the inset window...

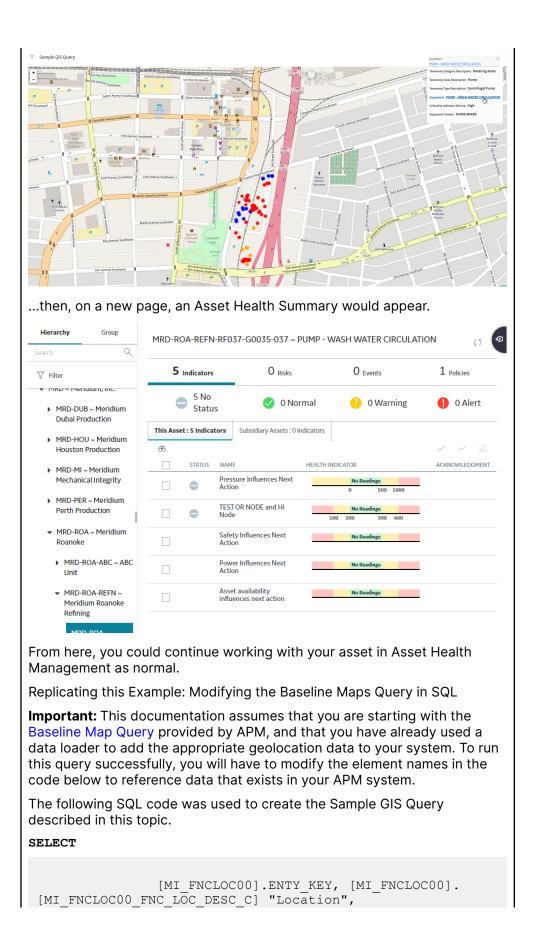

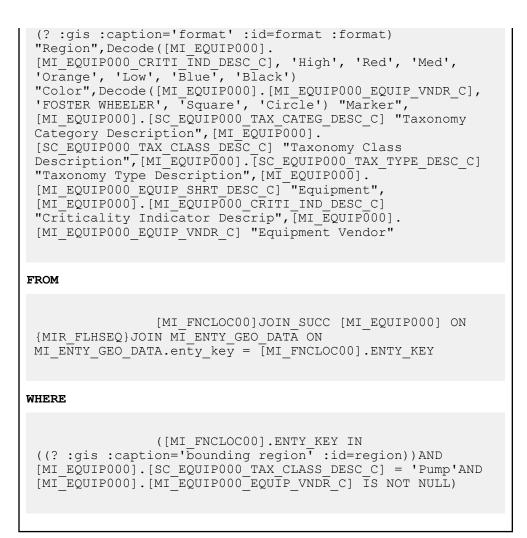

#### **Modify a Map Query**

#### Procedure

- 1. Access the **Maps** page.
- 2. In the row for the query that you want to modify, select the link in the **Source Query** column.

On a new page, the selected query appears.

3. Using the **Design** or **SQL** workspace, modify the query as needed.

**Note:** Consult the Map Query Workflow for additional steps that can be used to modify the Map query.

**Note:** Depending on the regular expressions used, some queries may only be modified in the **SQL** view.

4. If you want to overwrite the currently selected query, then select ៉.

Important: Selecting this option overwrites the currently selected Map query.

-or-

If you want to save the query as a new Catalog item, then select 💭. Then, on the window that appears, navigate to the folder in which you want to save the file, and then select **Save**.

The modified Map query is saved.

#### Admin

- About GIS Configuration
- Access the GIS
   Configuration Page
- Configure the Map Tile
   Server

#### **About GIS Configuration**

The Geographic Information System (GIS) feature of APM is used to store and display geospatial data associated with different entities. The map tiles required for this functionality are provided by utility mapping service providers. The GIS feature is designed to work in conjunction with the mapping service provider of your choice. You can select a mapping service provider to which you have subscribed in the **GIS Configuration** page.

You must be a Super User or a member of the MI Configuration Role Security Group to modify the GIS configuration.

#### **Access the GIS Configuration Page**

#### Procedure

In the module navigation menu, select Admin > Operations Manager > GIS Configuration.

The GIS Configuration page appears.

GIS Configuration			Save
Web Map Tile Server Configu	ration		
Map Tile Provider			
OpenStreetMap	$\sim$		
You must follow this provider's terms of use			

#### **Next Steps**

• Configure Map Tile Server

#### **Configure the Map Tile Server**

#### Procedure

- 1. Access the GIS Configuration page.
- 2. In the Map Tile Provider box, select the appropriate provider, and then select Save.

Tip: You can also enter the URL of a custom map tile provider.

**Note:** The default map tile provider is OpenStreetMap, which is a free service. Depending on the map tile provider, you may have to enter an API key before you can select **Save**.

**Important:** You must accept and adhere to the terms of service of the provider for the map tiles to appear correctly.

The map tile server is configured.

#### **Data Loader**

- About the Geographic
   Information System (GIS)
   Data Loader
- About the GIS Data Loader Requirements
- About the GIS Data Loader
   Data Model
- About the GIS Data Loader General Loading Strategy
- About the GIS Data Loader
   Workbook Layout and Use
- About the GIS Data Loader
   Load Verification

### About the Geographic Information System (GIS) Data Loader

The GIS Data Loader allows geospatial data associated with existing APM entities to be imported into the GIS data model, so that information about the entities can be displayed in the Maps module in APM. You can load geospatial data using the provided Excel workbook.

#### **About the GIS Data Loader Requirements**

To use the GIS Data Loader, you must have existing entity records, for example, the Functional Locations or Equipment, that you want to associate with the geospatial data. To use the geospatial data in the Maps module, your organization must have completed the GIS Configuration steps.

#### Mapping

The GIS Data Loader inserts geospatial data in the MI\_ENTY\_GEO\_DATA table and associates it with existing entities in APM. Entities are identified by mapping from specified cells in the Excel workbook to the ENTITY\_KEY field. The data loader evaluates the data provided in the Excel workbook in the following order:

- 1. ENTITY\_KEY
- 2. ENTITY\_ID
- 3. FAMILY\_ID + ID\_FIELD + ID


**Note:** The column positions in the spreadsheet should not be moved and the captions should not be changed.

Note: If data is not provided, the cell should be left empty.

#### About the GIS Data Loader Data Model

The following data model illustrates the records that the Data Loader supports.

#### **GIS Data Loader Data Model**

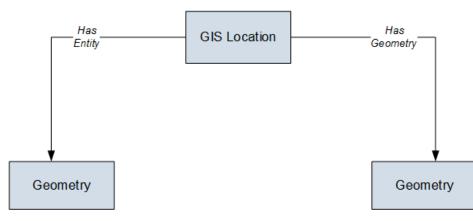

**Note:** In the diagram, GIS Location refers to the name of a database table. You can relate each GIS Location to an Entity of any family in APM. Geometry represents the actual data for GIS Location. The Has Entity and Has Geometry are not relationship families defined in APM. They are the relationships in an internal database and the purpose is same as the relationships between entity families.

#### About the GIS Data Loader General Loading Strategy

The imported data must load in a specific sequence to successfully populate fields, create records, and link data to the predecessor and successor records.

#### **Best Practices**

When importing data using the GIS Data Loader, you must use the following Best Practices:

- To identify an existing record to associate with the geospatial information, use one of the following options:
  - Specify the ENTITY\_KEY value.
  - Specify the ENTITY\_ID value. If ENTITY\_KEY is not provided, the data loader will search for the ENTITY\_KEY matching the ENTITY\_ID.
  - Specify the FAMILY\_ID, ID\_FIELD, and ID values. If ENTITY\_KEY and ENTITY\_ID are not provided, the data loader will search for an ENTITY\_KEY matching the specified values.
- If there is no existing record for the referenced Entity Key in the MI\_ENTY\_GEO\_DATA table, and you provide valid geospatial data, a new record will be created in the MI\_ENTY\_GEO\_DATA table.
- If there is an existing record for the referenced Entity Key in the MI\_ENTY\_GEO\_DATA table, and you provide new valid geospatial data, the existing record in the MI\_ENTY\_GEO\_DATA table will be updated.
- If there is an existing record for the referenced Entity Key in the MI\_ENTY\_GEO\_DATA table, and you provide no geospatial data (i.e. the cell is empty), the record will be deleted from the MI\_ENTY\_GEO\_DATA table.
- Geospatial data in the GEOD\_DATA column should conform to the geometry spatial data type.

**Note:** Valid geospatial data format is dependent on your APM database type. Points must specify Longitude first, then Latitude, in degrees. For example, the geospatial data for a point in Roanoke, Virginia, USA is defined as. POINT (-79.9372289704512 37.2698054035023) in SQL Server 2016.

• All columns in the worksheets must be formatted as Text or Entity Key. Entity Keys should be formatted as Numbers.

#### Load Sequence

When importing data using the data loader workbook, you must use the following workflow:

- 1. Download the data loader workbook provided by GE Vernova.
- 2. Identify the data requirements for exporting the data into the data loader workbook.
- 3. Extract data from APM and legacy applications to populate the data loader workbook.
- 4. Provide batch numbers in the Batch worksheet and in the first column of the remaining worksheets in the data loader workbook.
- 5. Import data into APM.
- 6. Monitor the status of the data load, and verify the results in the log.

7. Conduct tests in APM to ensure that the imported data loaded accurately.

For each row in the data loader workbook, the GIS Data Loader creates a new record in APM. However, if records have already been created and you import the data, the existing records will be updated or deleted.

#### About the GIS Data Loader Workbook Layout and Use

In order to import data using the GIS Data Loader, APM provides an Excel workbook, Geographic Information System (GIS).xlsx, which supports the Maps tool in APM. This workbook must be used to perform the data load.

The following table lists the worksheets that are included in the GIS Data Loader workbook.

Worksheet	Description	
GIS	The only worksheet used by the GIS Data Loader. It is used to load geospatial data for existing entities.	

The following table lists the fields in the workbook:

#### **GIS Worksheet**

Field Caption	Field ID	Data Type (Length)	Comments
Batch ID	BATCH_ID	Character (50)	This is the Batch ID field.
Entity Key	ENTITY_KEY	Numeric	This is the Entity Key field.
Entity ID	ENTITY_ID	Character (255)	This is the Entity ID field.
Family ID	FAMILY_ID	Character (50)	This is the Family ID field.
Family ID Field	ID_FIELD	Character (50)	This is the ID Field name for the specified Family.
ID	ID	Character (255)	The is the ID field.
Geometry	GEOD_DATA	Character (4000)	This is the Spatial Data Field.

#### About the GIS Data Loader Load Verification

#### About This Task

After loading data, you must perform the following steps in APM to ensure the integrity and accuracy of the data imported from the data loader workbook:

- Review the details of the import job. These details will indicate if any errors occurred during the data load. The log helps you identify any records that are not loaded.
- Run a query to view the geospatial data that was uploaded. You can use the baseline Map Query that is stored in the \\Public\Meridium\Modules\Core\Queries\Map Queries \ folder, as a reference.